




*DVD-VCR*

**SV-DVD40  
SV-DVD50  
SV-DVD55**

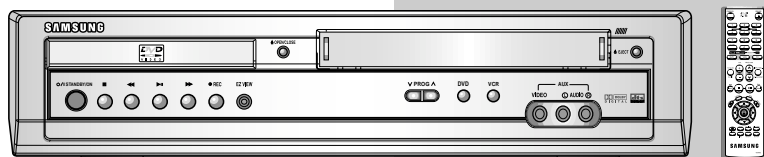

## **Instruction Manual**



[www.samsungvcr.com](http://www.samsungvcr.com)



## Safety Precautions



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

CAUTION. TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER. NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

### IMPORTANT NOTE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug. If it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover omitted if the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket, as there is a risk of shock hazard from the bared flexible cord.


### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code: -

BLUE = NEUTRAL      BROWN = LIVE

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: -

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL , OR COLOURED GREEN OR GREEN AND YELLOW.



## DANGER

This symbol is intended to alert you to the presence of dangerous voltage within the product.



## CAUTION

This symbol is intended to alert you to the presence of important instructions accompanying the product.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## Contents

◆ FOREWORD	
■ Disc Type and Characteristics .....	6
◆ DVD-VCR OVERVIEWS	
■ Front View of the DVD-VCR .....	7
■ Rear View of the DVD-VCR .....	8
■ Infrared Remote Control .....	9
■ Display Indicators .....	11
■ Accessories .....	11
◆ CONNECTING YOUR DVD-VCR	
■ Deciding How to Connect DVD-VCR .....	12
■ Connecting DVD-VCR to the TV using the Coaxial Cable .....	13
■ Connecting DVD-VCR to the TV using the SCART Cable .....	13
■ Connecting DVD-VCR to the Satellite receiver or Other Equipment .....	14
■ Connecting the Audio Output Cable .....	15
■ Plug & Auto Set Up .....	15
■ Tuning Your Television for the DVD-VCR .....	16
■ Deck Control Keys .....	17
■ Basic TV Tuner Operations .....	18
◆ SETTING UP YOUR DVD-VCR	
■ Inserting Batteries in the Remote Control .....	19
■ Setting the Date and Time .....	19
■ Menu Language .....	20
■ Presetting the Stations Automatically .....	21
■ Presetting the Stations Manually .....	22
■ Clearing a Preset Station .....	23
■ Changing the Preset Station Table .....	24
◆ VCR FUNCTIONS	
■ Setting the DVD-VCR Output Channel .....	25
■ Selecting the Colour Mode .....	26
■ NICAM .....	26
■ Intelligent Picture Control .....	27
■ VideoPlus + Extend .....	28
■ Auto Power off .....	28
■ Screen Messages .....	29
■ Selecting the Cassette Type .....	29
■ Repeat Play .....	30
■ S-VHS Play .....	30
■ Selecting the Recording Speed .....	31
■ Protecting a Recorded Cassette .....	32
■ Recording a Programme Immediately .....	32
■ Recording a Programme with Automatic Stop .....	33
■ Using the VideoPlus Feature .....	34
■ Modifying VideoPlus Programming .....	35
■ Using the Timer Programming Feature .....	36
■ Checking a Preset Recording .....	37
■ Cancelling a Preset Recording .....	37
◆ PLAYING BACK	
■ Playing a Cassette .....	38
■ Adjusting Picture Alignment Manually .....	38
■ Selecting the Audio Output Mode .....	39
■ Playing a Cassette in Slow Motion .....	39
■ Playing a Sequence Frame by Frame .....	40
■ Playing a Sequence at Variable Speeds .....	40
■ Searching for a Specific Sequence .....	41
■ Using the Tape Counter .....	43
■ Connecting an RCA Audio/Video Input Cable .....	44
■ Using the Assemble Edit Function .....	45
■ Recording from Another VCR or Camcorder .....	45

## Contents (cont.)

◆ DVD FUNCTIONS	
■ Using the TV Buttons on the Remote Control .....	46
■ Choosing a Connection .....	47
■ Disc Menu Language .....	48
■ Audio Language .....	48
■ Subtitle Language .....	49
■ Dolby Digital Out .....	49
■ MPEG-2 Digital Out .....	50
■ DTS .....	50
■ Dynamic Compression .....	51
■ PCM Down Sampling .....	51
■ TV Aspect Ratio .....	52
■ Black Level .....	52
■ NTSC Disc Output .....	53
■ DVD Out .....	53
■ Parental .....	54
■ A/V Receiver Connections .....	55
■ Special Playback Features .....	56
■ Disc Menu Navigation .....	57
■ EZ View .....	57
■ Title/Chapter/Time Selection .....	59
■ Angle View .....	60
■ Subtitle .....	61
■ A to B Repeat .....	62
■ Repeat Chapter/ Title .....	63
■ Audio .....	63
■ Marks .....	64
■ MP3/WMA Play .....	65
■ Program Play & Random Play .....	67
■ Picture CD Playback .....	68
◆ Technical Specifications .....	70
◆ SOLVING PROBLEMS	
■ Problems and Solutions (VCR) .....	71
■ Troubleshooting Guide (DVD) .....	72

## Symbols



Press/push



Hold down



Important



Note


① = Step number

## Safety Instructions


The following illustrations represent precautions.




The lightning bolt is a warning sign alerting you to dangerous voltage inside the product.  
DO NOT OPEN THE DVD-VCR. Refer to service personnel.

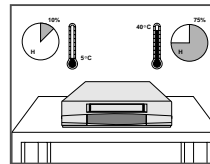


Do NOT expose the DVD-VCR to extreme temperature conditions (below 5°C and above 40°C) or to extreme humidity conditions (less than 10% and more than 75%).

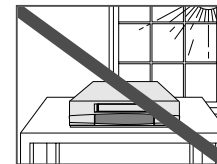


Do NOT expose the DVD-VCR to direct sunlight.

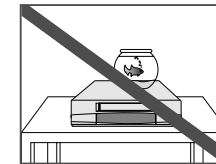


Do NOT expose the DVD-VCR to any liquids.

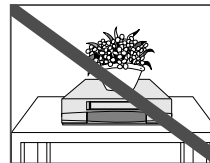

Do NOT place any objects on the DVD-VCR or remote control.

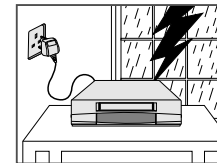

During a storm and/or lightning, unplug the DVD-VCR from the mains socket and aerial.

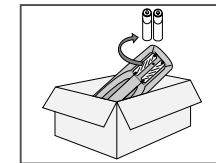



If the remote control is not used for a long period of time, remove the batteries and store it in a cool, dry place.

THIS DEVICE IS NOT FOR USE IN INDUSTRIAL ENVIRONMENTS

## Disc Type and Characteristics

This DVD player is capable of playing the following types of discs with the corresponding logos :

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
<b>DVD</b> 	Audio + Video	12 Cm	Single-sided 240 min. Double-sided 480 min.	<ul style="list-style-type: none"> <li>DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system.</li> <li>Various screen and audio functions can be easily selected through the on-screen menu.</li> </ul>
		8 Cm	Single-sided 80 min. Double-sided 160 min.	
<b>AUDIO-CD</b> 	Audio	12 Cm	74 min.	<ul style="list-style-type: none"> <li>An LP is recorded as an analog signal with more distortion. CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.</li> </ul>
		8 Cm	20 min.	

\* DO NOT play CD-ROM, CD-I and DVD-ROM in this player!  
(CDGs play audio only, not graphics.)

### Disc Markings



- Playback Region Number
- PAL colour system in U.K, France, Germany, etc.
- NTSC broadcast system in USA, Canada, Japan, South Korea, etc.
- Dolby Digital disc
- Stereo disc
- Digital Audio disc
- DTS disc


### Playback Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.


The Region Number for this player is described on the rear panel of the player.

## Front View of the DVD-VCR


### ( SV-DVD 40 )

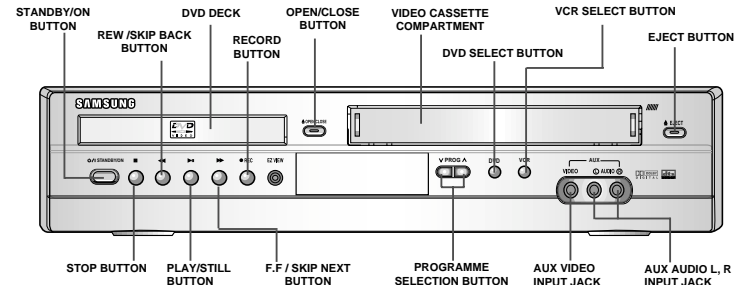

### ( SV-DVD 50 )

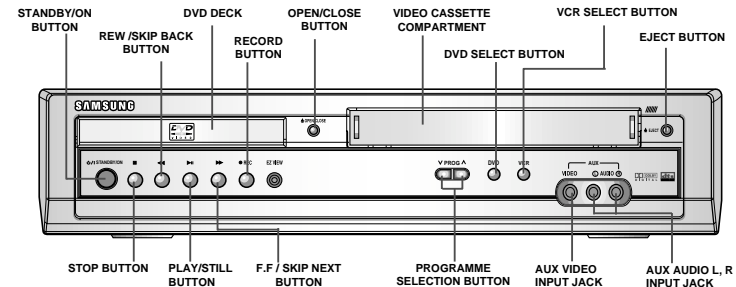


### ( SV-DVD 55 )

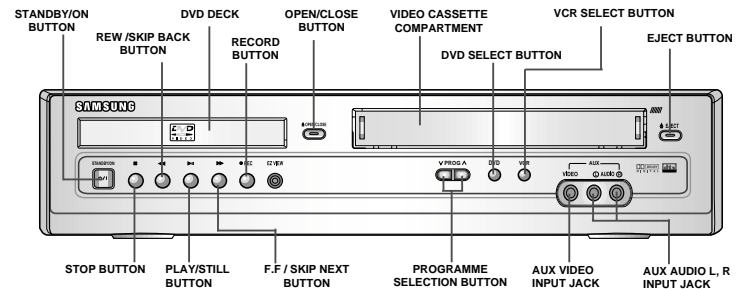


## Rear View of the DVD-VCR

( SV-DVD 40 )

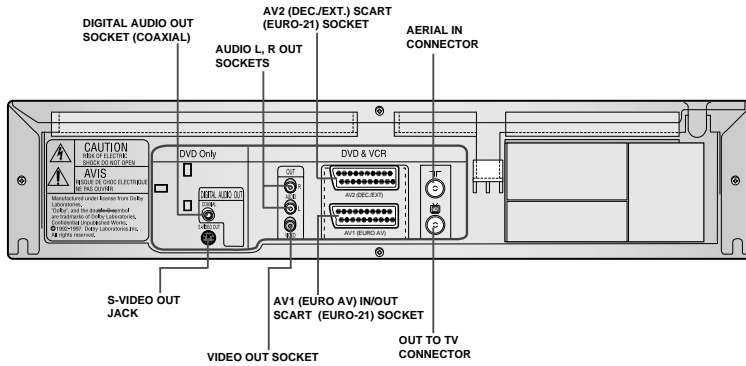


( SV-DVD 50/ SV-DVD 55 )

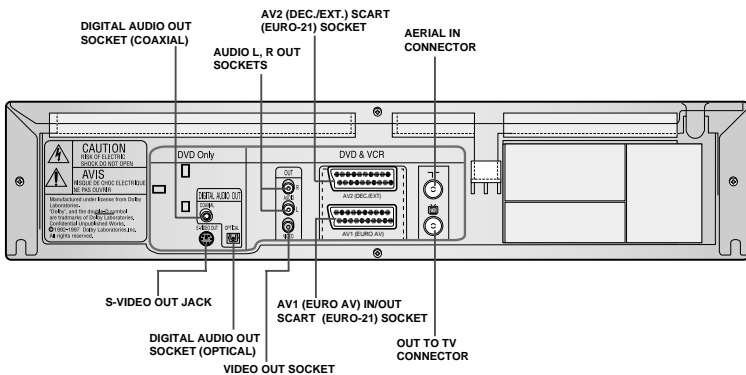

## Infrared Remote Control


( SV-DVD 40 )

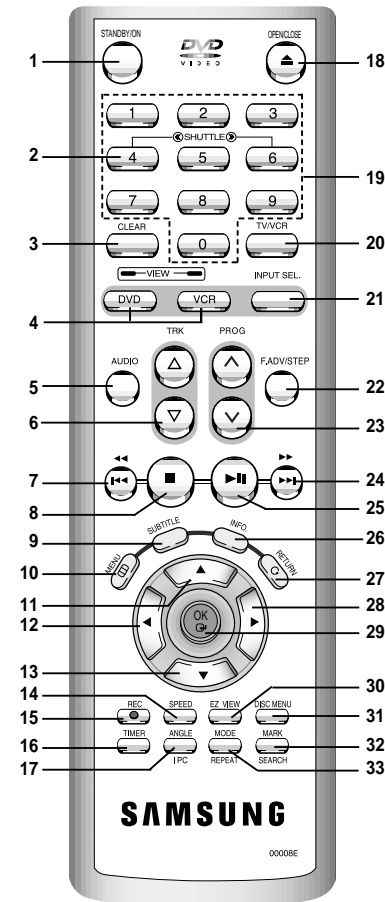

- 1 STANDBY/ON
- 2 SHUTTLE << / >>
- 3 CLEAR
- 4 DVD, VCR SELECT
- 5 AUDIO
- 6 TRK  $\Delta$  /  $\nabla$
- 7 REWIND
- 8 SKIP BACK
- 9 STOP
- 10 SUBTITLE
- 11 MENU
- 12 UP
- 13 LEFT
- 14 DOWN
- 15 SPEED SP/LP
- 16 RECORD
- 17 TIMER
- 18 ANGLE
- 19 OPEN/CLOSE
- 20 0-9
- 21 TV/VCR
- 22 INPUT SEL.
- 23 F.ADV/STEP
- 24 PROG  $\Delta$  /  $\nabla$
- 25 FAST-FORWARD
- 26 SKIP NEXT
- 27 PLAY/STILL
- 28 INFO.
- 29 RETURN
- 30 RIGHT
- 31 OK
- 32 EZ VIEW
- 33 DISC MENU


## Infrared Remote Control

(SV-DVD 50/ SV-DVD 55)

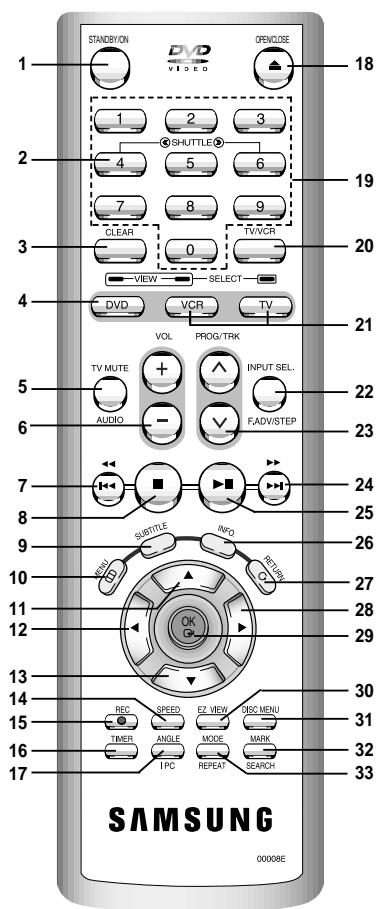

- 1 STANDBY/ON
- 2 SHUTTLE <</>>
- 3 CLEAR
- 4 DVD
- 5 TV MUTE, AUDIO
- 6 VOLUME +/-
- 7 REWIND
- 8 STOP
- 9 SUBTITLE
- 10 MENU
- 11 UP
- 12 LEFT
- 13 DOWN
- 14 SPEED SP/LP
- 15 RECORD
- 16 TIMER
- 17 ANGLE
- 18 OPEN/CLOSE
- 19 0-9
- 20 TV/VCR
- 21 VCR, TV SELECT
- 22 INPUT SEL.
- 23 F.ADV/STEP
- 24 PROG ^/v
- 25 TRACKING
- 26 FAST-FORWARD
- 27 SKIP NEXT
- 28 PLAY/STILL
- 29 INFO.
- 30 RETURN
- 31 RIGHT
- 32 OK
- 33 EZ VIEW
- 34 DISC MENU
- 35 MARK
- 36 SEARCH
- 37 MODE
- 38 REPEAT


## Display Indicators

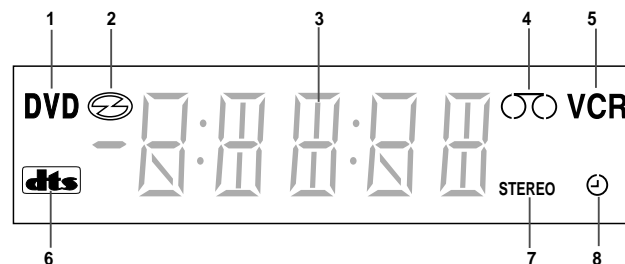

- 1 The DVD Deck is active
- 2 A DVD, CD or SVCD is loaded
- 3 The time, counter position, time remaining or current deck status is displayed
- 4 VHS tape is inserted
- 5 The VCR Deck is active
- 6 A DVD with a DTS soundtrack is loaded
- 7 The Hi-Fi track of a VHS tape is playing (The current TV show or video is broadcast in Stereo)
- 8 A Timer Recording is programmed or in progress.

## Accessories

You have just purchased a SAMSUNG Video Cassette Recorder (DVD-VCR). Together with your DVD-VCR, you will find the following accessories in the box.

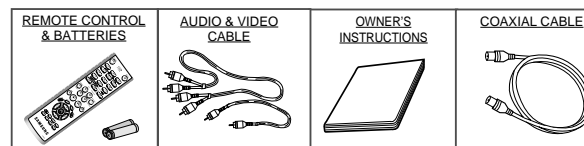

 





 


## Deciding How to Connect DVD-VCR

You must take into account various factors when connecting audio or video systems:

- ◆ Types of connectors available on your systems
- ◆ Systems connected permanently to the DVD-VCR (satellite receiver for example) or temporarily (camcorder for example)

Your DVD-VCR is equipped with the following connectors.

Connector	Location	Type	Direction	Recommended Use
AV1 (EURO AV)	Rear	SCART	In/Out 	<ul style="list-style-type: none"> <li>◆ Television</li> <li>◆ Satellite receiver</li> <li>◆ Other VCR</li> </ul>
AV2 IN	Rear	SCART	In 	<ul style="list-style-type: none"> <li>◆ Satellite receiver</li> <li>◆ Other VCR</li> </ul>
Audio output	Rear	Audio RCA	Out 	◆ Audio out
AUX	Front	Aux Audio/Video	In 	◆ Audio in Video in
VIDEO output	Rear	RCA	Out 	◆ Video out
S-VIDEO output	Rear	S-JACK	Out 	◆ S-Video out (DVD only)
Digital AUDIO output	Rear	Optical coaxial	Out 	◆ Digital Audio out (DVD only)
OUT TO TV	Rear	75 Ω coaxial	Out 	◆ Television
IN FROM ANT.	Rear	75 Ω coaxial	In 	<ul style="list-style-type: none"> <li>◆ Aerial</li> <li>◆ Cable television network</li> <li>◆ Satellite receiver</li> </ul>

Whenever you connect an audio or video system to your DVD-VCR, ensure that all elements are switched **off**.

 

Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.


## Connecting DVD-VCR to the TV using the Coaxial Cable

To receive television programmes a signal must be received from one of the following sources:


- ◆ An outdoor aerial
- ◆ An indoor aerial
- ◆ A cable television network
- ◆ A satellite receiver

Make sure that both the television and the DVD-VCR are switched **off** before connecting the cables.

- 1 Remove the aerial or network input cable from the television.
- 2 Connect this cable to the 75Ω coaxial socket marked  on the rear of your DVD-VCR.
- 3 Plug the coaxial cable supplied into the  socket on your DVD-VCR.
- 4 Plug the other end of the coaxial cable into the connector previously used for the aerial on the television.
- 5 To obtain better quality pictures and sound on your television, you can also connect your DVD-VCR to the television via the SCART cable (see section below) if your television is equipped with this type of connection.

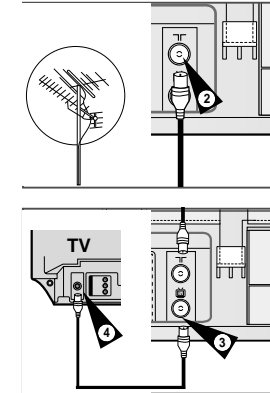

## Connecting DVD-VCR to the TV using the SCART Cable

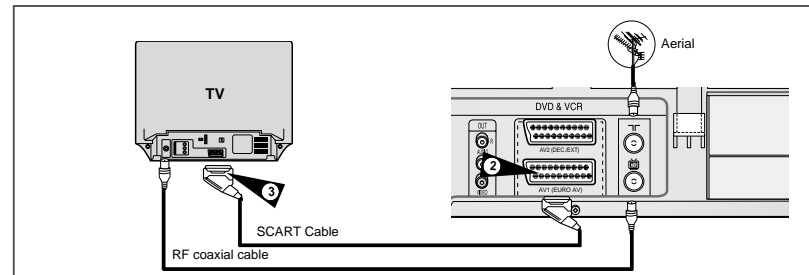

You can connect your DVD-VCR to the television using the SCART cable if the appropriate input is available on the television. You thus:

- ◆ Obtain better quality sound and pictures
- ◆ Simplify the setting up procedure of your DVD-VCR
- ◆ Regardless of the type of connection chosen, you must always connect the coaxial cable supplied. Otherwise, no picture will be visible on the screen when the DVD-VCR is switched off.
- ◆ Make sure that both the television and the DVD-VCR are switched **off** before connecting the cables.

- 1 Connect the coaxial cable as indicated in the above section.
- 2 Connect one end of the SCART cable to the AV1 (EURO AV) socket on the rear of the DVD-VCR.
- 3 Plug the other end into the appropriate connector on the television.

## Connecting DVD-VCR to a Satellite Receiver or Other Equipment

You can connect your DVD-VCR to a Satellite receiver or other DVD-VCR using the SCART cable if the appropriate outputs are available on the equipment chosen. The following illustrations give a few examples of the connection possibilities.

### 1. AV1(EURO AV): By means of 21-pin Scart Cable


Plug the SCART Cable with satellite receiver or other equipment into the AV1 (EURO AV) socket on the rear of the DVD-VCR.

After making this connection, select the source by pressing the INPUT SEL. button for the AV1 input sources.

### 2. By means of RF Coaxial Cable

After making this connection, you must preset the station received through the satellite tuner.

RF output channel of the satellite receiver should be adjusted away from channel 60, which is used by the DVD-VCR, e.g. re-adjust to channel 65.

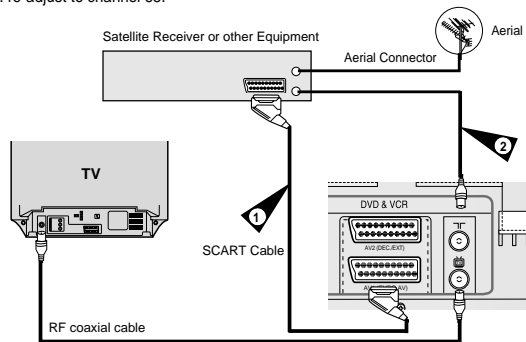

### 1. AV2 IN: By means of 21-pin Scart Cable


Plug the SCART Cable with satellite receiver or other equipment into the AV2 (DEC./EXT.) socket on the rear of the DVD-VCR.

After making this connection, select the source by pressing the INPUT SEL. button for the AV2 input sources.

### 2. By means of RF Coaxial Cable

After making this connection, you must preset the station received through the satellite tuner.

RF output channel of the satellite receiver should be adjusted away from channel 60, which is used by the DVD-VCR, e.g. re-adjust to channel 65.

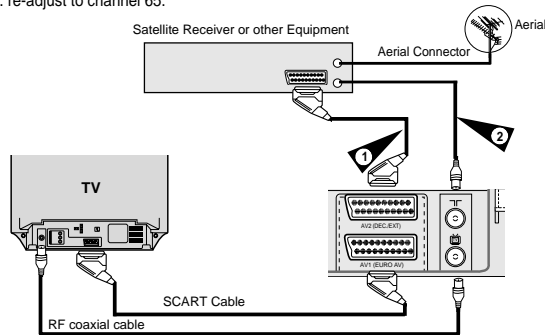

## Connecting the Audio Output Cable



You can connect your DVD-VCR to a Hi-Fi system.

**Example:** You wish to take advantage of the quality of your Hi-Fi stereo system when watching a programme or recording via your DVD-VCR.



- ◆ Regardless of the type of connection chosen, you must always connect the coaxial cable supplied. Otherwise, no picture will be visible on the screen when the DVD-VCR is switched off.
- ◆ Make sure that both the television and the DVD-VCR are switched off before connecting the cables.

- 1 Connect the coaxial cable or SCART as indicated on page 13.
- 2 Plug the audio output cable into the audio connectors on the rear of your DVD-VCR.  
➤ Respect the colour coding of the left and right channels.
- 3 Plug the other end of the audio cable into the appropriate input connectors on your Hi-Fi stereo system.

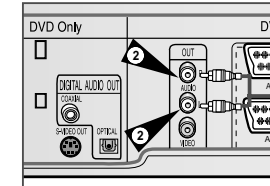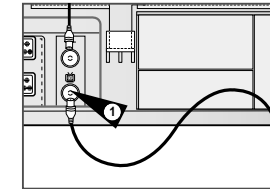

## Plug & Auto Set Up

Your DVD-VCR will automatically set itself up when it is plugged into the mains for the first time. TV stations will be stored in memory. The process takes a few minutes. Your DVD-VCR will then be ready for use.


- 1 Connect the coaxial cable as indicated on page 13.  
(Connecting Your DVD-VCR to the TV Using the Coaxial Cable)
- 2 Plug the DVD-VCR into the mains.
- 3 Start the auto scanning.  
◆ The number of stations automatically stored by the DVD-VCR depends on the number of stations that it has found.
- 4 The current time and date are displayed automatically.  
Check the date and time.  
if it is :  
◆ Incorrect, see page 19.



Now, you only have to switch the DVD-VCR on and it is ready for use.





Function for "Plug & Auto Set Up" is fixed already. So if you want to change this fixed one, you can change it by Presetting the Stations Automatically in OSD " Auto Setup" menu. (see page 21)

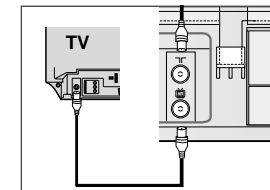



## Tuning Your Television for the DVD-VCR

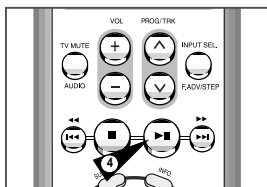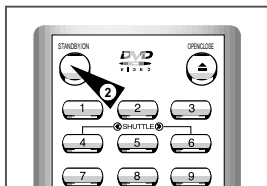

*You must tune your television for the DVD-VCR only if you are not using a Scart cable*

➤ To view pictures from your DVD-VCR when a Scart cable is used, the television must be set to the audio/video mode (AV).

- 1 Switch on the television.
- 2 Switch on the DVD-VCR by pressing STANDBY/ON on the front of the DVD-VCR or STANDBY/ON on the remote control.
- 3 Select a programme position on the television to be reserved for use with your DVD-VCR.
- 4 Insert the video cassette in the DVD-VCR. Check that the DVD-VCR starts reading the cassette; if not, press ►► button.
- 5 Start a scan on your television or set the television to UHF channel 60.
- 6 Fine tune the television until the pictures and sound are obtained clearly.
- 7 If you cannot find the pictures and sound, or there is interference from nearby channels, it may be necessary to change the setting of the DVD-VCR output channel (see Setting the DVD-VCR Output Channel on page 25 and Problems and Solutions on page 71).
- 8 When the picture and sound are perfectly clear, store this channel at the desired programme position on the television.  
Result: That programme is now reserved for use with your DVD-VCR.


## Deck Control Keys

*The DVD-VCR uses one set of controls to operate both decks. The following keys are helpful in successfully controlling each deck.*


- 1 **STANDBY/ON Button**  
Press the STANDBY/ON button on the remote control or front panel to turn on the DVD-VCR.
- 2 **DVD Button**  
Press the DVD button on the remote control when you want to control the DVD deck.  
♦ The DVD indicator will light on the Front Panel Display to show that the DVD deck is selected.
- 3 **VCR Button**  
Press the VCR button on remote control when you want to control the VCR deck.  
♦ The VCR indicator will light on the Front Panel Display to show that VHS deck is selected.
- 4 **INPUT SEL. BUTTON**  
Press the INPUT SEL. button repeatedly to cycle through all of your input sources, including the Tuner (PR##), AV1 (rear AV input), AV2 (rear AV input), AUX (front AV input).  
• It is only available when VCR deck is selected.

➤ Before using the VCR operation of 21~45 pages, press the VCR button on the remote control to select VCR mode.

Before using the DVD operation of 47~69 pages, press the DVD button on the remote control to select and watch DVD.



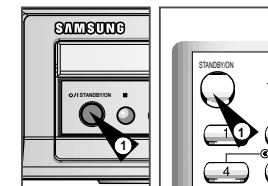


## Basic TV Tuner Operations

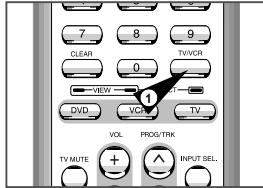

The following buttons are used when watching television via the DVD-VCR's built-in TV tuner.

- 1 **TV/VCR Button**  
Press to switch between your TV's tuner and the VCR's internal tuner.
- 2 **PROG  $\wedge/\vee$  Button**  
Press to change to the next or previous channel.
- 3 **0-9 Buttons**  
Press to select channels directly.
- 4 **INFO.**  
Press to display the channel you are watching.  
◆ Also works in DVD and VCR mode.

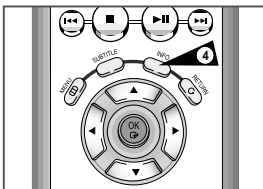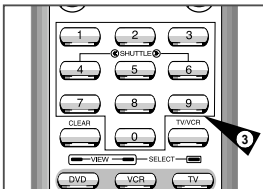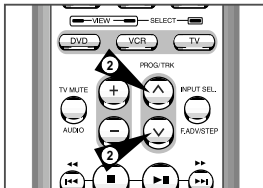



## Inserting Batteries in the Remote Control

You must insert or replace the batteries in the remote control when you:

- ◆ Purchase the DVD-VCR
- ◆ Find that the remote control is no longer working correctly

- 1 Push the tab in the direction of the arrow to release the battery compartment cover on the rear of the remote control.
- 2 Insert two AAA, RO3 or equivalent batteries, taking care to respect the polarities:  
◆ + on the battery with + on the remote control  
◆ - on the battery with - on the remote control
- 3 Replace the cover by aligning it with the base of the remote control and pushing it back into place.

➤ Do not mix different battery types (manganese and alkaline for example).

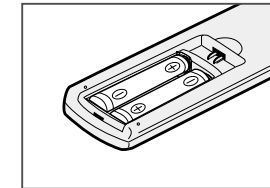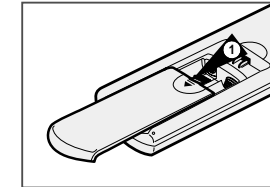

## Setting the Date and Time



Your DVD-VCR contains a 24-hour clock and calendar used to:

- ◆ Automatically stop programme recording
- ◆ Preset your DVD-VCR to record a programme automatically



You must set the date and time when:

- ◆ You purchase the DVD-VCR
- ◆ The time and date are set automatically from the broadcast signal. If the signal is weak or ghosting occurs, the time and date may not be set automatically. In this case, they should be set manually.
- ◆ Do not forget to reset the time when you change clocks from winter to summer time and vice versa.

- 1 After pressing the MENU, press the OK or  $\blacktriangleright$ .  
**Result:** The Setup menu is displayed.
- 2 Press the corresponding  $\blacktriangle$ ,  $\blacktriangledown$  buttons to select the **Clock** option.
- 3 Press the OK or  $\blacktriangleright$  to select this option.  
**Result:** The **Clock Set** menu is displayed.
- 4 Press  $\blacktriangleleft$  or  $\blacktriangleright$  to select the hour, minutes, day, month and year.  
**Result:** The option selected highlight.
- 5 Press the  $\blacktriangle$  or  $\blacktriangledown$  buttons to increase or decrease the value.  
**Result:** The day of the week is displayed automatically.  
➤ You can hold the  $\blacktriangle$  or  $\blacktriangledown$  buttons down to scroll more quickly through the values.
- 6 On completion, press RETURN to exit the menu.

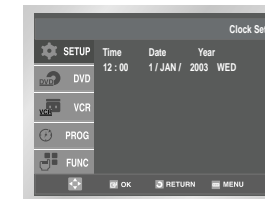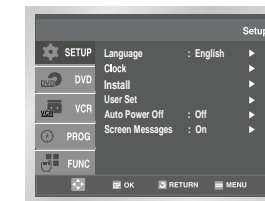

## Setting the Menu Language

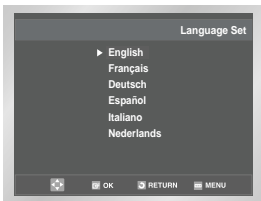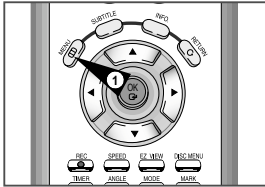

- 1 **Open "MENU"**  
After pressing the MENU, press the OK or ►.
- 2 **Select "Language"**  
Use the ▲ or ▼ buttons to highlight "Language," then press the OK or ►.
- 3 **Set menu Language**  
Place the selection arrow next to your desired Language, then press the OK button.
- 4 Press the ▲ or ▼ buttons to select language you want. Place the selection arrow next to your desired Language, then press the OK button.
- 5 On completion, press RETURN to exit the menu.

## Presetting the Stations Automatically

### VCR

✎ You do not need to preset the stations if you have already set them automatically (see Plug & Auto Set Up on page 15).

*Your DVD-VCR contains a built-in tuner used to receive television broadcasts.*




*You must preset the stations received through the tuner. This can be done:*

- ◆ *Plug & Auto Set up (see page 15)*
- ◆ *Automatically*
- ◆ *Manually (see page 22)*


*You can store up to 80 stations.*


- 1 After pressing the MENU, press the OK or ►.  
**Result:** The Setup menu is displayed.
- 2 Press the corresponding ▲, ▼ buttons to select the **Install** option.
- 3 Press the OK or ► to select this option.  
**Result:** The **Install** menu is displayed.
- 4 Press the corresponding ▲ or ▼ buttons, until the **Auto Setup** is selected. And then press the OK or ► to select this option.  
**Result:** A message appears, indicating that any channels already preset on your DVD-VCR will be deleted.
- 5 Press OK to start the auto scanning.  
**Result:**
  - ◆ The **Please Wait** indication highlight on the television screen.
  - ◆ The first frequency band is scanned and the first station found is displayed and stored.
  - ◆ The DVD-VCR then searches for the second station and so on.
  - ◆ When the automatic scanning procedure has finished, the DVD-VCR switches automatically to programme 1.
- 6 If you wish to cancel the auto scanning before the end, press the MENU button to exit the menu.

- 
- ◆ The time and date are set automatically from the broadcast signal. If the signal is weak or ghosting occurs, the time and date may not be set automatically. In this case, they should be set manually (see page 19).
  - ◆ Once the auto scanning procedure has finished, some stations may have been stored more than once; select the stations with the best reception and delete the ones no longer required (see page 23).

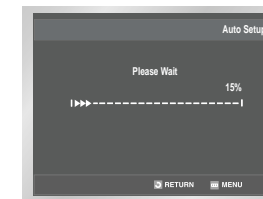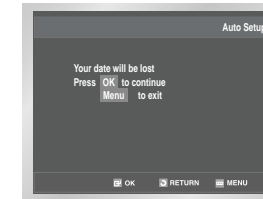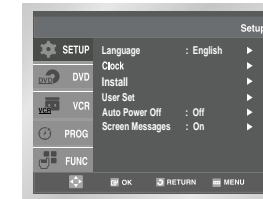

## VCR Presetting the Stations Manually



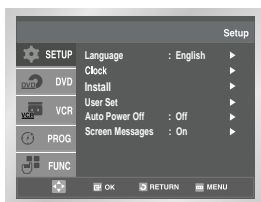


 You do not need to preset the stations manually if you have already set them automatically.

- 1 After pressing the MENU, press the OK or ►.  
Result: The Setup menu is displayed.
- 2 Press the corresponding ▲, ▼ buttons to select the **Install** option.
- 3 Press the OK or ► to select this option.  
Result: The **Install** menu is displayed.
- 4 Press the corresponding ▲ or ▼ buttons, until the **Manual Setup** option is selected.
- 5 Press the OK or ► to select a **Manual Setup** option.  
Result: The **TV STATION TABLE** menu is displayed.
- 6 Press the ▲ or ▼ buttons to select a programme number as required.
- 7 Press the ► button to preset the station.  
Result: The **MANUAL TUNING** menu is displayed.
- 8 Press the ◀ or ▶ buttons to start scanning channel.  
Result: The frequency band is scanned and the first station found is displayed.
- 9 Press the ▲ or ▼ buttons until the **NAME** is selected.  
The station name is set automatically from the broadcast signal.
- 10 To change the programme's name, press the ► button.  
Result: The first letter of the name flashes.
- 11 

<b>To...</b>	<b>Then...</b>
Select a character in the name	Press the ▲ or ▼ button until the required character is displayed (letters, numbers or "." character).
Move to the next or previous character	Press the ► or ◀ buttons respectively.
- 12 

<b>If you...</b>	<b>Then...</b>
Wish to store the station displayed	<ul style="list-style-type: none"> <li>◆ Press the corresponding ▲ or ▼ buttons, until the <b>MFT</b> is selected.</li> <li>◆ Press the ◀ or ▶ buttons to adjust the picture, if necessary.</li> <li>◆ Press OK to store the station</li> </ul>
Do <u>not</u> wish to store the station displayed	<ul style="list-style-type: none"> <li>◆ Press the corresponding ▲ or ▼ buttons, until the <b>CH</b> is selected.</li> <li>◆ Press the ◀ or ▶ buttons to go on scanning the frequency band and display the next station</li> <li>◆ Go back to the beginning of Step 12</li> </ul>
- 13 Repeat this procedure from Step 6 onwards, until all the required stations have been stored.
- 14 On completion, press the RETURN button four times to exit the menu.

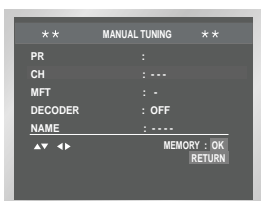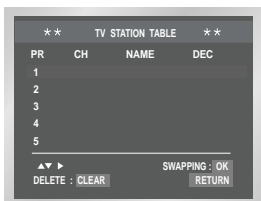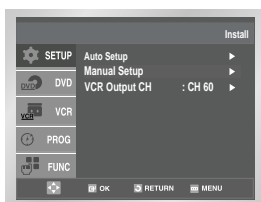

## Clearing a Preset Station



## VCR

If you have stored a TV station:





- ◆ *That you do not require*
- ◆ *At the wrong programme position*

you can cancel it.

- 1 After pressing the MENU, press the OK or ►.  
Result: The Setup menu is displayed.
- 2 Press the corresponding ▲, ▼ buttons to select the **Install** option.
- 3 Press the OK or ► to select this option.  
Result: The **Install** menu is displayed.
- 4 Press the corresponding ▲ or ▼ buttons, until the **Manual Setup** option is selected.
- 5 Press the OK or ► to select a **Manual Setup** option.  
Result: The **TV STATION TABLE** menu is displayed.
- 6 Press the corresponding ▲ or ▼ buttons, until the required preset TV station (PR) is selected.
- 7 Press the CLEAR button.
- 8 Repeat the same procedure from Step 6 onwards until all the required stations have been cleared.
- 9 On completion, press the RETURN button four times to exit the menu.

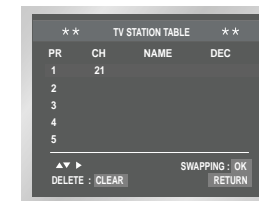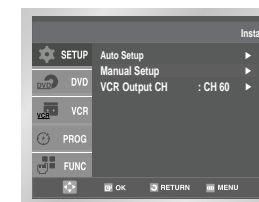

## VCR Changing the Preset Station Table

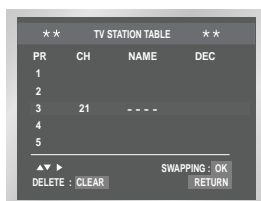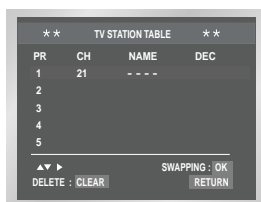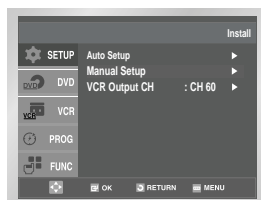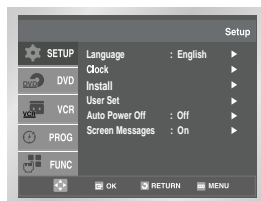

You can rearrange the Station Table and give different programme numbers to the stations listed according to your own preferences.

- 1 After pressing the MENU, press the OK or ►.  
**Result:** The Setup menu is displayed.
- 2 Press the corresponding ▲, ▼ buttons to select the **Install** option.
- 3 Press the OK or ► buttons to select this option.  
**Result:** The **Install** menu is displayed.
- 4 Press the corresponding ▲ or ▼ buttons, until the **Manual Setup** option is selected.
- 5 Press the OK or ► button to select this option.  
**Result:** The **TV STATION TABLE** menu is displayed.
- 6 Press the corresponding ▲ or ▼ buttons, until the required preset TV programme is selected.  
**Result:** The selected station is displayed at the same time on the television screen.
- 7 To change the programme number assigned to a station press the OK button on the remote control. (For example, To move a TV station in programme 1 to programme 3)
- 8 Press the ▲ or ▼ buttons to select required position. And then press OK again to swap the position.
- 9 On completion, press the RETURN button four times to exit the menu.


## Setting the DVD-VCR Output Channel

## VCR

Your DVD-VCR output channel may need to be changed if the pictures suffer from interference or if your TV cannot find the pictures.


Also, you can change the DVD-VCR output channel to adjust the frequency in which information is displayed on the screen.

- 1 After pressing the MENU, press the OK or ►.  
**Result:** The Setup menu is displayed.
- 2 Press the corresponding ▲, ▼ buttons to select the **Install** option.
- 3 Press the OK or ► to select this option.  
**Result:** The **Install** menu is displayed.
- 4 Press the ▲ or ▼ buttons, until the **VCR Output CH** option is selected.
- 5 Select the required output channel (CH21~CH69) by pressing the OK or ► buttons.  
→ CH21 → .. CH36 → .. CH69
- 6 On completion, press RETURN to exit the menu. Then tune your television again (see page 16).

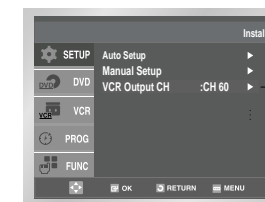


CH:21  
: CH:36  
: CH:69


## VCR Selecting the Colour Mode

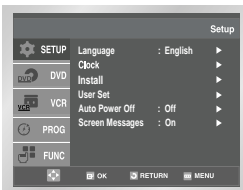

SV-DVD 50/SV-DVD 55

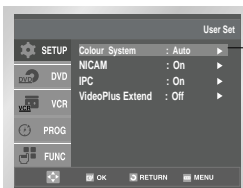

SV-DVD 40

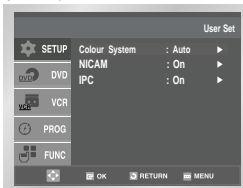

Before recording or playing back a cassette, you can select the required system standard.

Otherwise, the system automatically selects the reception standard when you select **AUTO**.



- ◆ When playing back a cassette, the standard is automatically selected by the DVD-VCR.
- ◆ When you playback an NTSC-recorded tape on this DVD-VCR make a setting on the colour system according to your TV. If your TV is a PAL system only TV, set NTPB. If your TV is Multi System TV (NTSC 4.43 compatible), set NT4.43 and you can record NT4.43.

- 1 After pressing the MENU, press the OK or ►.   
Result: The Setup menu is displayed.
- 2 Press the corresponding ▲, ▼ buttons to select the **User Set** option.
- 3 Press the OK or ► to select this option.   
Result: The **User Set** menu is displayed.
- 4 Press the corresponding ▲ or ▼ buttons, until the **Colour System** option is selected.
- 5 Press the OK or ► button to select **Auto** → **PAL** → **B/W**.
 

<b>Auto</b>	When playing back a cassette, the system standard is automatically selected by the DVD-VCR.
<b>B/W</b>	Black and White
- 6 On completion, press RETURN three time to exit the menu.

Auto  
PAL  
B/W

## VCR NICAM

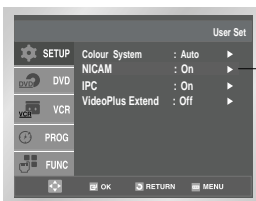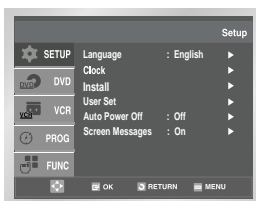

On  
Off

*NICAM programmes are divided into 3 types. NICAM Stereo, NICAM Mono and Bilingual (transmission in another language). NICAM programmes are always accompanied by a standard mono sound broadcast and you can select the desired sound. Please refer to page 39.*



- 1 After pressing the MENU, press the OK or ►.   
Result: The Setup menu is displayed.
- 2 Press the corresponding ▲, ▼ buttons to select the **User Set** option.
- 3 Press the OK or ► to select this option.   
Result: The **User Set** menu is displayed.
- 4 Press the corresponding ▲ or ▼ buttons, until the **NICAM** option is selected.
- 5 To... Press OK or ►, until...
 

Mono mode	<b>Off</b> is displayed. Off: Only set at this position to record the standard mono sound during a NICAM broadcast if the stereo sound is distorted due to inferior reception conditions.
NICAM mode	<b>On</b> is displayed. On: Normally set at this position.
- 6 On completion, press RETURN three times to exit the menu.

## Intelligent Picture Control

The Intelligent Picture Control Feature allows you to adjust the sharpness of the image automatically, according to your own preferences.


- 1 During playback, press the MENU button on the remote control.   
Result: The Setup menu is displayed.
- 2 Press the OK or ►.   
Result: The Setup menu is displayed.
- 3 Press the corresponding ▲, ▼ buttons to select the **User Set** option.
- 4 Press the OK or ► buttons to select this option.   
Result: The **User Set** menu is displayed.
- 5 Press the corresponding ▲ or ▼ buttons, until the **IPC** option is selected.
- 6 Press the OK or ► buttons to select the IPC (intelligent picture control) option.
  - When intelligent picture control mode is **On**, the sharpness of the image is adjusted automatically.
- 7 To adjust the sharpness manually, press the ▼ button to turn the IPC mode **Off**.
- 8 Press the ◀ or ▶ buttons until the picture is displayed according to your preferences.
  - If you do not press a button within ten seconds, the **PICTURE** menu disappears automatically.
- 9 On completion, press the RETURN button again.

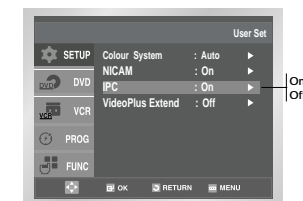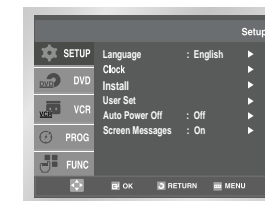


On  
Off

## Intelligent Picture Control ( Remote Control )

- 1 During playback, press the IPC button.   
Result: The **PICTURE** menu is displayed.
- 2 Press the ▼ button to turn the IPC (Intelligent Picture Control) option **On** and **Off**.
  - When Intelligent Picture Control mode is **ON**, the sharpness of the image is adjusted automatically.
- 3 To adjust the sharpness manually, select Intelligent Picture Control mode **OFF**.
  - ◆ The horizontal picture adjusting appears.
- 4 Press the ◀ or ▶ buttons until the picture is displayed according to your preferences.
  - If you do not press a button within ten seconds, the **PICTURE** menu disappears automatically.
- 5 On completion, press the IPC button again.

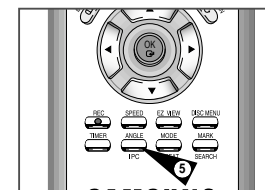


## VCR VideoPlus+ Extend ★(SV-DVD 50/SV-DVD55 Only)

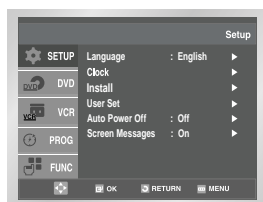

To prevent delays or over-runs the VCR has a function called **VideoPlus Extend** allowing you to extend the recording time by up to 60 minutes.

➤ Only use if PDC is not available or set to OFF.

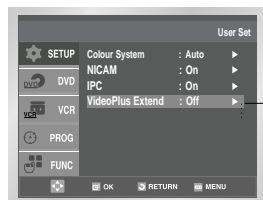

Off  
10  
20  
30  
40  
50  
60


- 1 After pressing the MENU, press the OK or ►.
- 2 Press the corresponding ▲, ▼ buttons to select the **User Set** option.
- 3 Press the OK or ► buttons to select this option.  
**Result:** The **User Set** menu is displayed.
- 4 Press the corresponding ▲ or ▼ buttons, until the **VideoPlus Extend** option is selected.
- 5 Press the OK or ► buttons to set the VideoPlus Extend time by increments of 10 minutes.
- 6 To turn off, press OK or ► buttons repeatedly until **Off** shows.

## Screen Messages

## VCR

Your DVD-VCR displays most information both on the DVD-VCR and the television.


You can choose to display or hide this information on the television screen (except for the **SEARCH**, **Programming MENU** and **Timer** functions, which cannot be hidden).

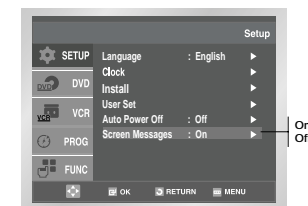

On  
Off


- 1 After pressing the MENU, press the OK or ►.  
**Result:** The Setup menu is displayed.
- 2 Press the corresponding ▲ or ▼ buttons, until the **Screen Messages** option is selected.
- 3 **To...** **Press OK or ►, until...**  
Display on-screen information **On** is displayed.  
Hide on-screen information **Off** is displayed.
- 4 On completion, press RETURN twice to exit the menu.

## VCR Auto Power Off

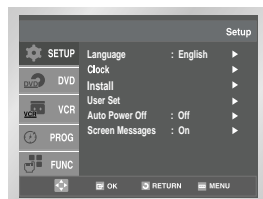

The **Auto Power Off** feature automatically turns off your DVD-VCR if no signal is received and you do not press any button for the selected time.

- 1 After pressing the MENU, press the OK or ►.  
**Result:** The Setup menu is displayed.
- 2 Press the corresponding ▲ or ▼ buttons, until the **Auto Power Off** option is selected.
- 3 Press the OK or ► buttons, until you select the time of Auto Power Off interval.  
➤ Off ➔ 1Hour ➔ 2Hour ➔ 3Hour
- 4 On completion, press RETURN twice to exit the menu.

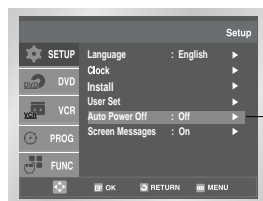


Off  
1Hour  
2Hour  
3Hour

## Selecting the Cassette Type

## VCR



If you wish to use the tape counter to display the time remaining on a cassette, you must indicate the type of cassette inserted.

- 1 After pressing the MENU press the corresponding ▲, ▼ buttons to select the **VCR** option.
- 2 Press the OK or ► buttons to select this option.  
**Result:** The **VCR Setup** menu is displayed.
- 3 Press the corresponding ▲ or ▼ buttons, until the **Tape Select** option is selected.
- 4 Press the OK or ► buttons as many times as required, until the correct cassette length is displayed.  
➤ E180 ➔ E240  
E 300 ← E260 ←
- 5 Press RETURN twice to exit the menu.

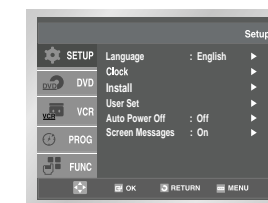

E180  
E240  
E260  
E300

## VCR Repeat Play

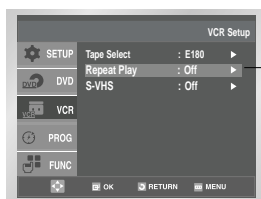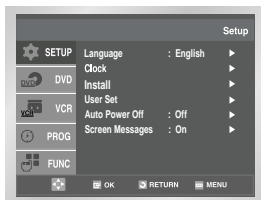

You can set repeat play to repeat the tape continuously from beginning to end.

- 1 After pressing the MENU, press the corresponding ▲, ▼ buttons to select the **VCR** option.
- 2 Press the OK or ► buttons to select this option.  
**Result:** The **VCR Setup** menu is displayed.
- 3 Press the corresponding ▲ or ▼ buttons, until the **Repeat Play** option is selected.
- 4 **To...** **Press OK or ►, until...**  
Repeat play **On** is displayed.  
Do not wish to repeat play **Off** is displayed.
- 5 On completion, press RETURN twice to exit the menu.

## Selecting the Recording Speed

### VCR


You can record a cassette at two different speeds:

- ◆ **SP (Standard Play)**
  - ◆ **LP (Long Play)**
- In Long Play modes:*
- ◆ Each cassette lasts twice as long
  - ◆ The recording is of a slightly lower quality


To record a cassette... Press the **SPEED** button on the remote control, until...

In standard play mode **SP** is displayed.  
In long play mode **LP** is displayed.

Type	Recording Time (in SP)
E-180	180 mins. or 3 hours
E-240	240 mins. or 4 hours
E-260	260 mins. or 4 hours and 20 mins.
E-300	300 mins. or 5 hours

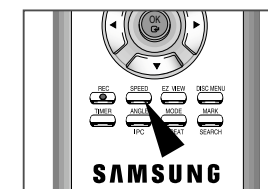

## VCR S-VHS Play

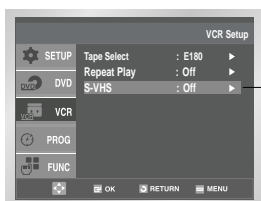


The DVD-VCR allows you to playback high quality S-VHS tapes.

- 1 During S-VHS play mode after pressing the MENU press the corresponding ▲, ▼ buttons to select the **VCR** option.
- 2 Press the OK or ► buttons to select this option.  
**Result:** The **VCR Setup** menu is displayed.
- 3 Press the corresponding ▲ or ▼ buttons, until the **S-VHS** option is selected.
- 4 **To...** **Press OK or ►, until...**  
S-VHS play **On** is displayed.  
Do not wish to S-VHS play **Off** is displayed.
- 5 On completion, press RETURN twice to exit the menu.  
To watch S-VHS tapes, set the S-VHS mode to **On** in the VCR Setup.



## VCR Protecting a Recorded Cassette



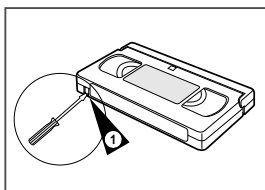


Video cassettes have a safety tab to prevent accidental erasure. When this tab has been removed, you cannot record on the tape.

- 1 If you wish to protect a cassette, break off the tab using a small screwdriver.
- 2 To re-record over a protected cassette (safety tab broken), cover the hole with adhesive tape.

## VCR Recording a Programme Immediately

Before recording a programme, you must have preset the corresponding station (unless you are recording via an external video source). If you have not done so, refer to pages 21 and 22.

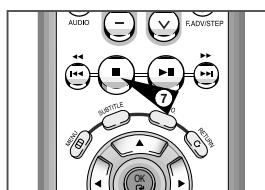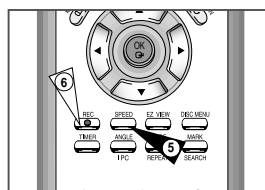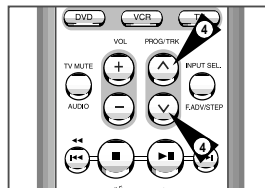

- 1 Switch on the television.
- 2 To monitor the programme being recorded, select the television channel reserved for use with your DVD-VCR (or the AV input if used).
- 3 Insert the cassette on which the programme is to be recorded, with the window visible and the safety tab intact or the opening covered with adhesive tape.  
**Result:** The DVD-VCR is switched on automatically.
- 4 Select:
  - ♦ The station to be recorded using the PROG (▲ or ▼) buttons or
  - ♦ The AV1, AV2 or AUX source using the INPUT SEL. button for a satellite tuner or external video source**Result:** The station number is displayed and the programme can be seen on the television.
- 5 Select the recording speed by pressing the SPEED button as many times as required (see page 31).
- 6 Hold REC (●) down for a while to start recording.  
**Result:** The record indicator appears on the television and DVD-VCR display. An index is recorded on the tape (see page 41).
- 7 To stop recording, press ■ once.

- 
- ♦ If your DVD-VCR ejects the cassette when you start recording, check to make sure that the cassette's safety tab is intact or that the opening (created by a broken safety tab) is covered with adhesive tape.
  - ♦ If you reach the end of the tape while recording, the cassette rewinds automatically.

## Recording a Programme with Automatic Stop

## VCR





This function enables you to record up to nine hours (LP) of programmes.



Your DVD-VCR stops automatically after the requested length of time.

- 1 Switch on the television.
- 2 To monitor the programme being recorded, select the television channel reserved for use with your DVD-VCR (or the AV input if used).
- 3 Insert the cassette on which the programme is to be recorded, with the window visible and the safety tab intact or the opening covered with adhesive tape.  
**Result:** The DVD-VCR is switched on automatically.
- 4 Select:
  - ♦ The station to be recorded using the PROG (▲ or ▼) buttons or
  - ♦ The AV1, AV2 or AUX source using the INPUT SEL. button for a satellite tuner or external video source**Result:** The channel number is displayed and the programme can be seen on the television.
- 5 Select the recording speed by pressing the SPEED button as many times as required (see page 31).
- 6 Hold the REC button (●) down for a while to start recording.  
**Result:** The record indicator appears on the television screen and DVD-VCR display. An index is recorded on the tape (see page 41).
- 7 Press the REC button (●) several times to increase the recording time in:
  - ♦ 30-minute intervals up to four hours
  - ♦ 1-hour intervals up to nine hours**Result:** The length is displayed on the television displays. The selected programme is recorded for the length of time requested. At the end of that time, the DVD-VCR stops recording automatically and power off.
- 8 If you wish to cancel the recording before the end, press STANDBY/ON.




- ✋ If the end of the tape is reached while recording:
- ♦ The recording stops and power off.

- ✋ This function is not available in DVD recording

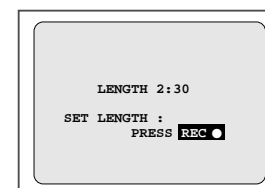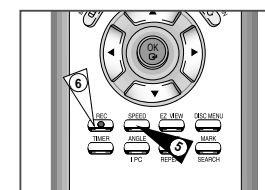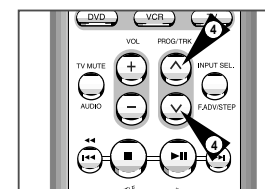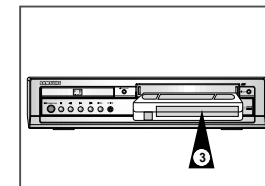

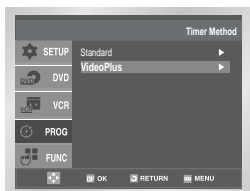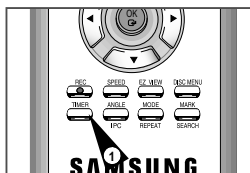

★ (SV-DVD40)

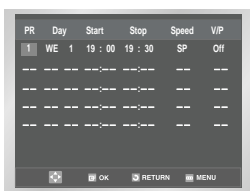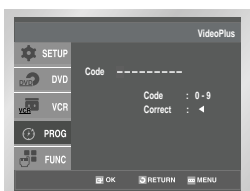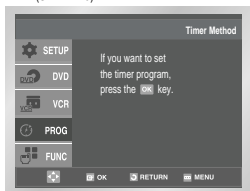

34

Before presetting your DVD-VCR:

- ◆ Switch on both the television and your DVD-VCR
- ◆ Check that the date and time are correct
- ◆ Insert the cassette on which the programme is to be recorded (safety tab intact)

Up to six programmes can be preset.

- 1 To enter a VideoPlus, press the TIMER button. Press the ▲ or ▼ and OK or ► buttons to select **VideoPlus**.  
**Result:** A message is displayed to allow you to enter the VideoPlus code.  
✎ If all six programmes have been set, the message **Timer is full** is displayed. Refer to page 37 if you wish to cancel a preset recording.
- 2 Press the numeric buttons to enter the code opposite the programme that you wish to record in your television magazine.  
➤ If you wish to correct the VideoPlus code that you are entering:
  - ◆ Press the ◀ button until the digit to be corrected is cleared
  - ◆ Enter the correct digit
- 3 Press the OK button.  
**Result:** The information concerning the programme is displayed.  
✎ When using the VideoPlus function for the first time with stored stations, the programme number flashes. This one time, you must enter the station number manually by pressing the ▲ or ▼ buttons. Refer to the following page if:
  - ◆ The programme number or times flash
  - ◆ You wish to modify the programme
- 4 If the programme and times are correct, press the RETURN button.
- 5 Press the STANDBY/ON button to activate the timer.
- 6 Refer to page 37 if you wish to:
  - ◆ Check that your DVD-VCR has been programmed correctly
  - ◆ Cancel a preset recording

✎ The numbers next to each TV programme listing are VideoPlus+ code numbers, which allow you to programme your videorecorder instantly with the remote control. Tap in the VideoPlus code for the programme you wish to record.




™ VideoPlus+ is a trademark of Gemstar Development Corporation. The VideoPlus+ system is manufactured under licence from Gemstar Development Corporation.

If you wish to correct the programme displayed or modify certain elements, such as the recording speed, you can do so before you press RETURN a second time to confirm.

If you wish to...	Then...
Select an input source other than the tuner (AV1, AV2 or AUX)	<ul style="list-style-type: none"> <li>◆ Press the ◀ or ► buttons, until the <b>PR</b> selection mode.</li> <li>◆ Press the INPUT SEL. button one or more times to change the input source selection. <b>Result:</b> The programme number is replaced by:                             <ul style="list-style-type: none"> <li>• The AV1, AV2 or AUX source using the INPUT SEL. button for a satellite tuner or external video source</li> </ul> </li> <li>➤ The input source must be selected before changing any other value.</li> </ul>
Record a programme every day (Monday to Sunday) at the same time	<ul style="list-style-type: none"> <li>◆ Press the ◀ or ► buttons, until the <b>Day</b> selection mode.</li> <li>◆ Press the ▲ or ▼ buttons, until the <b>DLY</b> (Daily) value is displayed.</li> </ul>
Record a programme every week on the same day and at the same time	<ul style="list-style-type: none"> <li>◆ Press the ◀ or ► buttons, until the <b>Day</b> selection mode.</li> <li>◆ Press the ▲ or ▼ buttons, until the <b>W-</b> (Week) value is displayed, followed by the required day. <b>Example:</b> <b>W-SA</b> (Weekly Saturday)</li> </ul>
Extend the recording time	<ul style="list-style-type: none"> <li>◆ Press the ◀ or ► buttons, until the <b>Stop</b> selection mode.</li> <li>◆ Press the ▲ or ▼ buttons to increase or decrease the stop time.</li> </ul>
Select the recording speed	<ul style="list-style-type: none"> <li>◆ Press the ◀ or ► buttons, until the recording speed selection mode.</li> <li>◆ Press the ▲ or ▼ buttons until the correct indication is displayed:                             <ul style="list-style-type: none"> <li>• <b>Auto</b> (Auto Tape Speed Select) : see page 36</li> <li>• <b>SP</b> (Standard Play)</li> <li>• <b>LP</b> (Long Play)</li> </ul> </li> </ul>
Select the PDC recording	<ul style="list-style-type: none"> <li>◆ Press the ◀ or ► buttons, until the PDC off mode.</li> <li>◆ Press the ▲ or ▼ buttons until the "On" indication is displayed. ✎ Do not select PDC unless you are sure the programme you wish to record is broadcast with PDC. If you do set PDC On (by selecting "On" in the right - hand column on the screen), then you must set up the start-time EXACTLY according to the published TV schedule. Otherwise the timer recording won't take place.</li> </ul>

35

## VCR Using the Timer Programming Feature

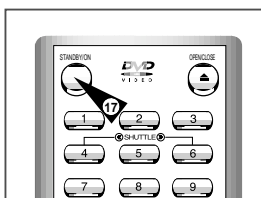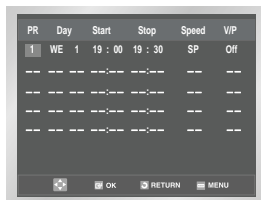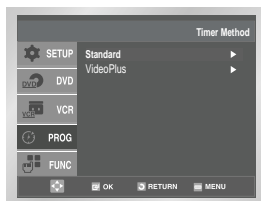

The Timer Programming feature allows you to preset the DVD-VCR to record a programme up to one month before that programme is to be broadcast. Up to six programmes can be preset.

Before presetting a recording, check that the date and time are correct.

- 1 Insert the cassette and press TIMER on the remote control.  
**Result:** The timer selection is displayed.
- 2 Press the OK button to select **Standard** option.  
**Result:** The **TIMER PROGRAMMING** menu is displayed.
- 3 Press **▶** to select the input source.
- 4 Select the required station by pressing the **▲**, **▼** buttons or INPUT SEL. to select the AV1, AV2 or AUX input sources.
- 5 Press **▶** to select the recording day.
- 6 Select the required day by pressing the **▲** or **▼** buttons.
- 7 Press **▶** to select the recording start time.
- 8 Select the required hour value by pressing the **▲** or **▼** buttons.
- 9 Press **▶** to select the minutes.
- 10 Select the required minute value by pressing the **▲** or **▼** buttons.
- 11 Press **▶** to select the recording stop time.
- 12 Select the required recording stop time by pressing the **▲** or **▼** buttons, following the same procedure as when selecting the recording start time.
- 13 Press **▶** to select the recording speed.
- 14 Press the **▲** or **▼** buttons to select the **SP** (Standard Play), **LP** (Long Play), **Auto** (Auto Tape Speed Select) recording speeds.
- 15 Press the **▲** or **▼** buttons to toggle between the PDC mode (marked **On**) and the non PDC mode (marked **Off**).
- 16 When you have finished, press the RETURN button.
- 17 Press the STANDBY/ON button to activate the timer.  
**Result:** Before starting recording, the DVD-VCR compares the timer duration with the remaining time on the cassette.

➤ Auto Tape Speed Select. The DVD-VCR's "Auto Tape Speed Select" function compares the duration of the timer recording to the actual recording time remaining on the tape loaded. If there is insufficient tape to complete a timer recording in AUTO mode, the DVD-VCR automatically switches to LP mode to record the whole programme.


## Checking a Preset Recording

### VCR

You can check your preset recordings:

- ◆ When you have finished presetting the DVD-VCR
- ◆ If you have forgotten which programmes will be recorded

- 1 Press TIMER on the remote control.  
**Result:** The timer selection is displayed.
- 2 Press the OK button to select **Standard** option.  
**Result:** The **TIMER PROGRAMMING** menu is displayed.
- 3 Press the **▲** or **▼** buttons to select the required programme.
- 4 Press the **◀** or **▶** buttons to select and change any values as required. For more details, refer to the previous page.
- 5 On completion, press RETURN twice.

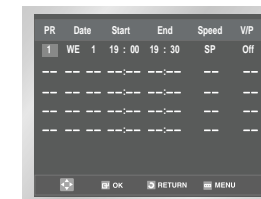


## Cancelling a Preset Recording

### VCR



You can cancel any programmes that are:

- ◆ Incorrect
- ◆ No longer required

- 1 Press TIMER on the remote control.  
**Result:** The timer selection is displayed.
- 2 Press the OK button to select **Standard** option.  
**Result:** The **TIMER PROGRAMMING** menu is displayed.
- 3 Select the programme to be cancelled by pressing the **▲** or **▼** buttons.
- 4 Press the CLEAR button to cancel the selected programme.  
**Result:** All the recording information is deleted and the broadcast will not be recorded.
- 5 On completion, press RETURN twice.

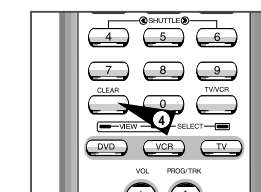

## VCR Playing a Cassette

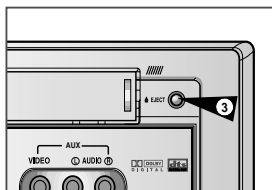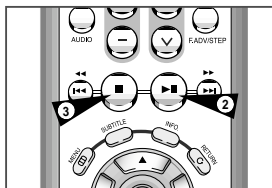

*This function allows you to play back any pre-recorded cassette.*

- 1 Switch on both the television and your DVD-VCR.
- 2 Insert the video cassette to be played. If the safety tab on the cassette is intact, press ►II. Otherwise, the cassette is played automatically.
  - When a cassette is loaded, the tape position is optimized automatically to reduce disturbance (Digital Auto Tracking). When playing a cassette, if the end of the tape is reached, the cassette is rewind automatically. NTSC tapes can be played back but cannot be recorded with this DVD-VCR.
- 3
 

To...	Then press...
Stop the playback	■ (STOP).
Eject the cassette	▲ (EJECT).



## Selecting the Audio Output Mode

## VCR


*You can select the mode in which the sound is reproduced on the loudspeakers and AV outputs. The following options are available.*

Option	Description
L	Used to listen to the sound on the left Hi-Fi channel.
R	Used to listen to the sound on the right Hi-Fi channel.
MIX	Used to listen to the mixed sound of the Hi-Fi and normal channels.
MONO	Used to listen to the sound on the normal mono channel.
L R	Used to listen to Hi-Fi stereo sound on the left and right channels. <ul style="list-style-type: none"> <li>➤ When playing back tapes recorded in Hi-Fi, the sound switches to Hi-Fi after five seconds of Mono.</li> </ul>

To select the sound mode, simply press the AUDIO button on the remote control until the required option is displayed.

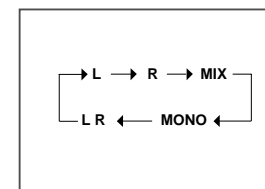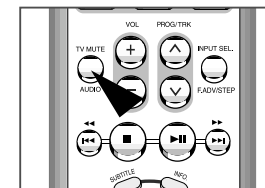

## VCR Adjusting Picture Alignment Manually

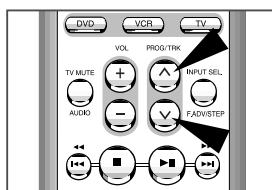

*The Picture Adjustment feature allows you to adjust the alignment manually to obtain the best possible picture.*

When noise bars or streaks appear during playback, adjust alignment manually by pressing the TRK (▲ or ▼) buttons until the picture is clear and stable.

- Result:**
- ◆ The tracking bar appears.
  - ◆ The image is adjusted.
  - ◆ The tracking bar disappears when you release the button.

## Playing a Cassette in Slow Motion



## VCR

*You can play a cassette in slow motion.*

- No sound is heard when playing back a cassette in slow motion.

- 1 Press:
  - ◆ ►II to start playing the cassette
  - ◆ ►II button one more time to make still mode.
  - ◆ ►► to start SLOW mode.
  - ◆ ►► or ◀◀ button as many times as required to decrease or increase the speed respectively
  - ◆ To return to the normal speed, press the ►II button twice.
- 2 When playing back in slow motion, picture interference may occur. Press the TRK (▲ or ▼) buttons to minimize this effect.

- ✎ When you have been using the Slow Motion function for more than about two minutes, the DVD-VCR will automatically play to protect the:
  - ◆ Cassette
  - ◆ Video heads

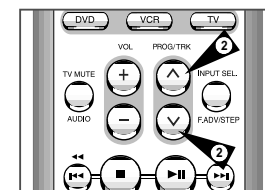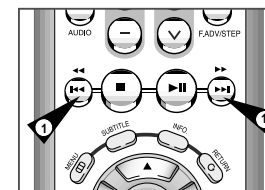

## VCR Playing a Sequence Frame by Frame




You can:

- ◆ Stop the cassette at a given frame (image)
  - ◆ Advance one frame at a time
- No sound is heard when playing back frame by frame.

- 1 Press:
  - ◆ ►II to start playing the cassette
  - ◆ ►II button one more time to make still mode.
  - ◆ F.ADV/STEP ( ) to advance frame by frame
- 2 To return to normal playback, press ►II.

- Vertical stability: When playing back frame by frame, interference may be seen on the screen. Press the TRK ( , ) buttons to minimize this effect.

## VCR Playing a Sequence at Variable Speeds

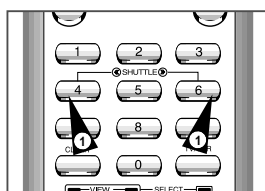

You can vary the playback speed using the Shuttle function (up to nine times the normal speed).

**Example:** You wish to analyze a sportsperson's technique, movement by movement.

The Shuttle function is available on the Remote control

- No sound is heard when playing a sequence at variable speeds.

- 1 Press:
  - ◆ ►II during playback
  - ◆ SHUTTLE (<<) to play the cassette backwards
  - ◆ SHUTTLE (>>) to play the cassette forwards
- 2 Each time you press a SHUTTLE button, the speed is changed as shown in the following illustration.

REVERSE PLAY X9	REVERSE PLAY X5	REVERSE PLAY X3	RPLAY	STILL	SLOW MOTION X1/10	SLOW MOTION X1/5	PLAY	2PLAY	PLAY X3	PLAY X5	PLAY X9
-----------------------	-----------------------	-----------------------	-------	-------	-------------------------	------------------------	------	-------	------------	------------	------------

## Searching for a Specific Sequence


### VCR

Each time you record a cassette on this DVD-VCR, an "index" is automatically marked on the tape when recording starts.

The Search function allows you to fast-forward or rewind to a specific index and start playback from that point. Depending on the direction selected, the indexes are numbered as follows:

		↓		
etc.	Prev Seq.	Seq. being played	Next Seq.	etc.
2	1	1	2	

- This DVD-VCR uses a standard indexing system (VISS). As a result, it will recognize any indexes marked by other VCRs using the same system and vice versa.

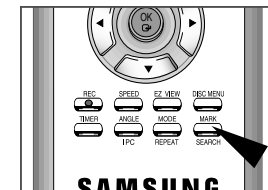

### Go to 0:00:00 Stop

Use this feature when you want to search for the 0:00:00 counter position on a cassette. Press the CLEAR button at the point on the tape where you want to set the counter to 0:00:00.

The VCR will rewind or fast forward, searching for the 0:00:00 counter position, and then automatically stop at that position.





- 1 After pressing the SEARCH, press the corresponding ▲ or ▼ buttons, until the Go to (0:00:00) option is selected.
- 2 Press the OK or ►.

### End Search

Use this feature when you want to search for a blank position to record a program on a cassette.

The VCR will fast forward, searching for a blank position, and then automatically stop at that position. If the VCR reaches the end of the tape during end search, the tape will be ejected.

- 1 After pressing the SEARCH, press the corresponding ▲ or ▼ buttons, until the End Search option is selected.
- 2 Press the OK or ►.

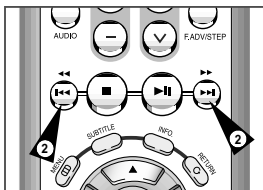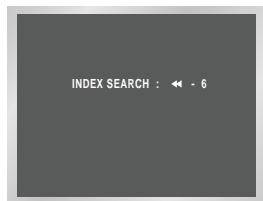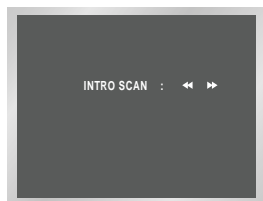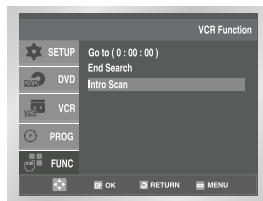

### Intro Scan

- 1 After pressing the SEARCH, press the corresponding ▲ or ▼ buttons, until the **Intro Scan** option is selected.
- 2 Press the OK or ►.
- 3 Press the ◀◀ or ▶▶ buttons depending on the direction where your desired programme is located.
- 4 When an Index mark is found the DVD-VCR will playback the tape for 5 seconds, after which it will continue searching for the next Index mark.
- 5 If you want to watch the tape from a particular Index, simply press ▶▶.

### Index Skip Search:

*This feature will enable you to fast forward/rewind to a specific point on a tape: E.g. if you have recorded 3 different programmes on a tape and you have rewound the tape to the beginning, by using this feature you can go directly to the start of programme 2 simply by pressing the SEARCH button.*

- 1 After pressing the SEARCH, press the corresponding ▲ or ▼ buttons, until the **Intro Scan** option is selected.
- 2 Press the OK or ►.
- 3 Press the ◀◀ or ▶▶ buttons twice more. This will take you directly to the start of the desired programme is located.
- 4 These Index searches can be made forwards: (press ▶▶) or backwards: (press ◀◀). (◀◀-20 . . 0 . . +20 ▶▶)
- 5 To cancel an Index search simply press the ▶▶ or ■ button.

### The tape counter:

- ◆ Indicates the elapsed time in the play and record modes (hours, minutes and seconds)
- ◆ Is reset when a cassette is inserted in the DVD-VCR
- ◆ Allows you to find the beginning of a sequence easily



If the remaining time is to be calculated correctly, you must indicate the type of cassette being used.


- 1 Insert a cassette in your DVD-VCR.
- 2 To set the tape counter to zero at the beginning of a sequence:
  - ◆ Press INFO. twice to display the counter
  - ◆ Press CLEAR when you want to set the tape counter to zero
- 3 When you are ready,
  - ◆ Start playback or Recording.
  - ◆ Press the ■ button.
  - ◆ To fast-forward or rewind to the sequence at which the counter was set to zero, press ◀◀ or ▶▶.



Some DVD-VCR information, such as the counter, can be displayed on the television screen (unless you have deactivated the Screen messages mode; refer to page 29).

### Press INFO.:

- ◆ Once to display the current function, programme number, recording speed, date, time and counter
- ◆ Twice to display the counter only
- ◆ Three times to display the time remaining on the cassette
- ◆ Four times to clear the display

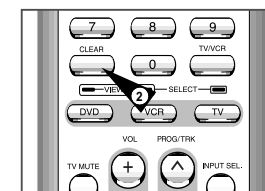

## VCR Connecting an RCA Audio/Video Input Cable

You can connect other audio/video equipment to your DVD-VCR using audio/video cables if the appropriate outputs are available on the equipment chosen.

**Examples:** ♦ You wish to copy a video cassette with the help of a second VCR (see page 45).

♦ You wish to play back and/or copy pictures taken with a camcorder (see page 45).



♦ Make sure that both the television and the DVD-VCR are switched off before connecting the cables.

- 1 Connect one end of the RCA audio/video cable into the VIDEO INPUT socket on the front of the DVD-VCR.
- 2 Plug the other end of the audio/video cable into the appropriate output connector on the other system (VCR or camcorder).
- 3 Connect one end of the RCA audio cable supplied into the AUDIO INPUT sockets on the front of the DVD-VCR.
  - Take care to respect the colour coding of the left and right channels.
- 4 Plug the other end of the audio cable into the appropriate output connectors on the other system (VCR, camcorder or Hi-Fi sound system).

## Using the Assemble Edit Function

This function allows you to start a new recording at a specific position on the cassette while maintaining a very smooth scene change.

- 1 Insert the cassette to be edited in your DVD-VCR.
- 2 Press the ►II button to start playback.
- 3 When you reach the position from which you wish to start the new recording, press the ►II button.
- 4 Press the F.ADV/STEP ( ) button again as often as necessary to advance frame by frame, until the exact recording position is located.
- 5 While the DVD-VCR is in still mode, hold the REC button (●) down for a while to activate the Assemble Edit function.
- 6 Select the source from which you wish to record by pressing:
  - ♦ The PROG (Λ or V) buttons for television channels
  - ♦ The INPUT SEL. button for the AV1, AV2 or AUX input sources
- 7 Press the ►II button to start recording.
- 8 When you have finished recording, press ■.

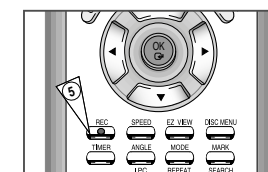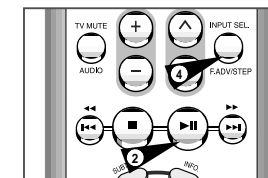

## Recoding from Another VCR or Camcorder



You can copy a cassette to your DVD-VCR from another video source, such as another VCR or a camcorder.

It is an infringement of copyright laws to copy prerecorded cassettes or to re-record them in any form without the permission of the owners of the corresponding copyright.




- 1 Connect the DVD-VCR, from which the cassette is to be copied, to the appropriate SCART audio and video input connectors on the rear of your DVD-VCR, as indicated on page 13.
- 2 Insert a blank cassette in your DVD-VCR.
- 3 Insert the pre-recorded cassette in the other video source (VCR or camcorder).
- 4 Press the INPUT SEL. button to select the appropriate input on your DVD-VCR:
  - ♦ AV1, AV2 for the SCART input
  - ♦ AUX for the RCA input
- 5 Start playing back the cassette to be copied.
- 6 Hold REC (●) down for a while to start recording on your DVD-VCR.
- 7 When you have finished recording, press ■ on both VCR and DVD-VCR.

➤ If you wish to view the cassette being copied:

- ♦ Your DVD-VCR must be connected as usual to the television (see page 13 for further details)

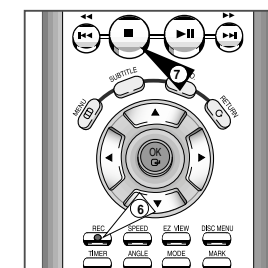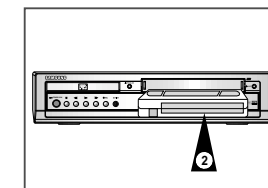

## Using the TV Buttons on the Remote Control

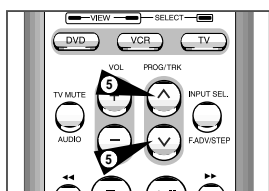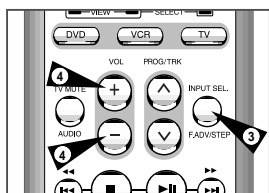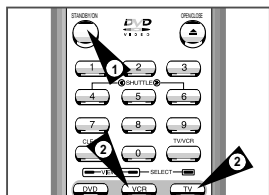

Your DVD-VCR remote control will work with Samsung televisions and compatible brands.

To determine whether your television is compatible, follow the instructions below.

- 1 Switch your television on.
- 2 Point the remote control towards the television.
- 3 Hold down the TV button and enter the two-figure code corresponding to the brand of your television, by pressing the appropriate numeric buttons.

Brand	Codes	Brand	Codes
SAMSUNG	01 to 06	PHILIPS	02, 20, 22
AKAI	09, 23	SABA	13, 14, 22 to 24
GRUNDIG	09, 17, 21	SONY	15, 16
LOEWE	02	THOMSON	13, 14, 24
PANASONIC	08, 23 to 27	TOSHIBA	07, 16 to 19, 21

**Result:** If your television is compatible with the remote control, it will switch off. It is now programmed to operate with the remote control.

➤ If several codes are indicated for your television brand, try each one in turn until you find one that works.

✎ When you change the batteries in the remote control, you must reprogramme the code, following the same procedure.

You can then control the television using the following buttons.

Button	Function
STANDBY/ON ①	Used to switch the television and DVD-VCR on and off.
TV or VCR ②	Used to switch between the TV and VCR modes.
INPUT SEL. ③	Used to select an external source.
VOL + or - ④	Used to adjust the volume of the television.
PROG/TRK ⑤ (▲ or ▼)	Used to select the required programme.
TV MUTE ⑥	Used to mute the volume of the television.


➤ The various functions will not necessarily work on all televisions. If you encounter problems, operate the television directly.

## Choosing a Connection

DVD



The following show examples of connections commonly used to connect the DVD -VCR player with a TV and other components. It is only available for DVD. The VCR out can not watch by this connection.

### Connection to an Audio System

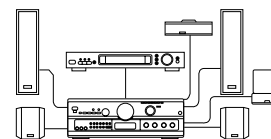


Dolby Digital Decoder  
Digital Audio Input Jack

### Connection to an Television

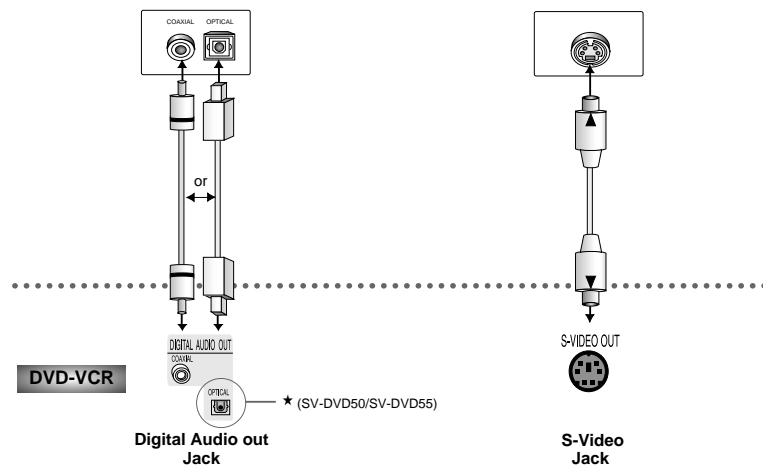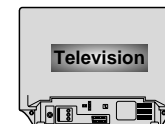




## DVD Disc Menu Language

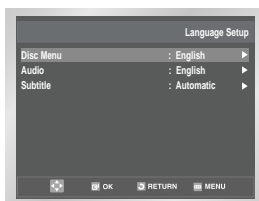

To set the Disc Menu Language to your preferred language, follow these steps. If your preferred language is available on a DVD, your Disc Menu Language will automatically be set to the language you choose.

- 1 Open "MENU"**  
Press the MENU button while the DVD is in Stop mode.
- 2 Select "DVD"**  
Use the ▲ or ▼ buttons to highlight "DVD Setup," then press the OK or ► buttons.
- 3 Select "Language Setup"**  
Highlight "Language Setup", then press the OK or ► buttons.
- 4 Select "Disc Menu"**  
Highlight "Disc Menu", then press the OK or ► buttons.
- 5 Set "Disc Menu Language" Preference**  
Highlight your preferred language for disc menus, then press the OK button.

## DVD Audio Language

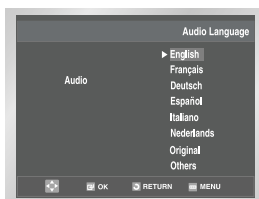



To set the Audio Language to your preferred language, follow these steps. If your preferred language is available on a DVD, your Audio Language will automatically be set to the language you choose.

- 1 Open "MENU"**  
Press the MENU button while the DVD is in Stop mode.
- 2 Select "DVD"**  
Use the ▲ or ▼ buttons to highlight "DVD Setup," then press the OK or ► buttons.
- 3 Select "Audio"**  
Highlight "Audio," then press the OK or ► buttons.
- 4 Set "Audio Language" Preference**  
Highlight your preferred language for audio soundtracks, then press the OK button.

## Subtitle Language

To set the Subtitle Language to your preferred language, follow these steps. If your preferred language is available on a DVD, your Subtitle Language will automatically be set to the language you choose.

- 1 Open "MENU"**  
Press the MENU button while the DVD is in Stop mode.
- 2 Select "DVD"**  
Use the ▲ or ▼ buttons to highlight "DVD" then press the OK or ► buttons.
- 3 Select "Subtitle"**  
Highlight "Subtitle", then press the OK or ► buttons.
- 4 Set "Subtitle Language" Preference**  
Highlight your preferred language for subtitles, then press the OK or ► buttons.

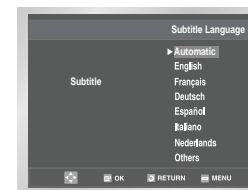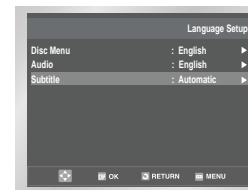


## Dolby Digital Out

If your A/V receiver is equipped with a Dolby Digital decoder, your DVD-VCR can output Dolby Digital 5.1 sound, but you MUST enable this feature in the menu system to prevent damage to your speakers.


**NOTE:** Select "Bitstream" ONLY if you have connected a Dolby Digital-equipped A/V receiver to the Digital Output (optical or coaxial) on the DVD back panel.

- 1 Open "MENU"**  
With the DVD in stop mode, press the MENU button.
- 2 Select "DVD"**  
Use the ▲ or ▼ buttons to highlight "DVD" then press the OK or ► buttons.
- 3 Select "Audio Setup"**  
Highlight "Audio Setup", then press the OK or ► buttons.
- 4 Set "Dolby Digital Out"**  
Highlight "Dolby Digital Output" then press the ► or OK buttons to select one of the following options:
  - PCM - To use your DVD-VCR with an A/V receiver NOT equipped with a Dolby Digital decoder.
  - Bitstream - To use your DVD-VCR with an A/V receiver equipped with a Dolby Digital decoder.

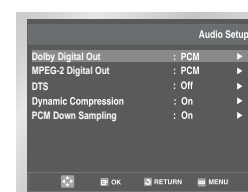

PCM  
Bitstream


## DVD MPEG-2 Digital Out

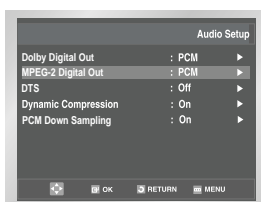

If your A/V receiver is equipped with a MPEG-2 decoder, your DVD-VCR can output MPEG-2 sound, but you MUST enable this feature in the menu system to prevent damage to your speakers.

- Open "MENU"**  
With the DVD in stop mode, press the MENU button.
- Select "DVD"**  
Use the ▲ or ▼ buttons to highlight "DVD " then press the OK or ► buttons.
- Select "Audio Setup"**  
Highlight "Audio Setup," then press the OK or ► buttons.
- Set "MPEG-2 Digital Out"**  
Highlight "MPEG-2 Digital Out," then press the ► or OK button to select one of the following options:
  - PCM - To use your DVD-VCR with an A/V receiver NOT equipped with a Dolby Digital decoder.
  - Bitstream – To use your DVD-VCR with an A/V receiver equipped th a Dolby Digital decoder.

## DVD DTS

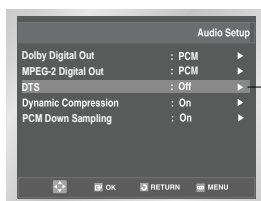

If your A/V receiver is equipped with a DTS decoder, your DVD-VCR can output DTS digital sound, but you MUST enable this feature in the menu system.


**NOTE:** Select "On" ONLY if you have connected a DTS-equipped A/V receiver to the DIGITAL AUDIO OUT (optical or coaxial) on the DVD-VCR back panel.

- Open "MENU"**  
With the DVD in stop mode, press the MENU button.
- Select "DVD"**  
Use the ▲ or ▼ buttons to highlight "DVD " then press the OK or ► buttons.
- Select "Audio Setup"**  
Highlight "Audio Setup," then press the OK or ► buttons.
- Set "DTS"**  
Highlight "DTS," then press the OK or ► buttons to select one of the following options:
  - Off - To use your DVD-VCR with an A/V receiver NOT equipped with a DTS decoder.
  - On – To use your DVD-VCR with an A/V receiver equipped with a DTS decoder.

## Dynamic Compression


Dynamic Compression constrains the dynamic range, i.e. the difference between the quietest and loudest passages of a DVD soundtrack. This enables you to limit loud noises, such as explosions, or raise the volume of quiet passages, such as whispering, while watching a movie. This is convenient for viewing movies late at night.

- Open "MENU"**  
With the DVD in stop mode, press the MENU button.
- Select "DVD"**  
Use the ▲ or ▼ buttons to highlight "DVD " then press the OK or ► buttons.
- Select "Audio Setup"**  
Highlight "Audio Setup," then press the OK or ► buttons.
- Set "Dynamic Compression"**  
Highlight "Dynamic Compression," then press the OK or ► buttons to select one of the following options:
  - On - The total dynamic range of the DVD soundtrack will be compressed, so quiet passages will be louder and loud passages will be softer.
  - Off – The original dynamic range will be preserved.


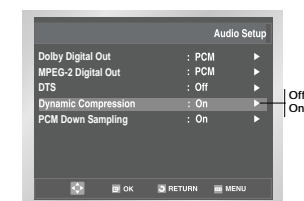


## PCM Down Sampling

- Open "MENU"**  
Press the MENU button while the DVD is in Stop mode.
- Select "DVD"**  
Use the ▲ or ▼ buttons to highlight "DVD " then press the OK or ► buttons.
- Select "Audio Setup"**  
Highlight "Audio Setup," then press the OK or ► buttons.
- Set "PCM Down Sampling"**  
Highlight "PCM Down Sampling", then press the OK or ► buttons to select one of the following options:
  - Off – When the disc with 96K of Audio disc insert in, it will output 96K without any change.
  - On - When the disc with 96K Audio inserted in, it will downsize 96K to 48K and output it.

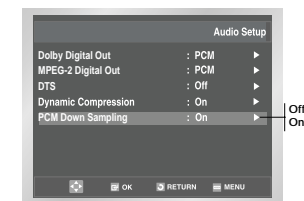

## DVD TV Aspect Ratio

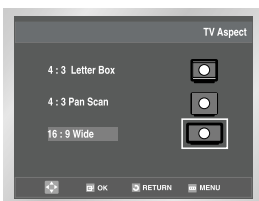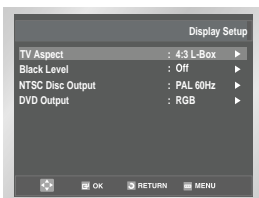

Set the aspect ratio (length x width) of your TV screen so the DVD player will display movies at the appropriate size for your television. Choose from standard, letterbox, or widescreen format.

### 1 Open "MENU"

With the DVD in stop mode, press the MENU button.

### 2 Select "DVD"

Use the ▲ or ▼ buttons to highlight "DVD " then press the OK or ► buttons.

### 3 Select "Display Setup"

Highlight "Display Setup," then press the OK or ► buttons.

### 4 Select "TV Aspect"

### 5 Set "TV Aspect"

Highlight "TV Aspect," then press the ▲ or ▼ button to select one of the following options:

- 4:3 Letter Box – This method displays the full width of the widescreen movie on a standard 4:3 television. As a result, black bars will appear at the top and bottom of the screen.
- 4:3 Pan Scan – The familiar way of watching DVD and VHS movies, this method selectively crops (by panning and scanning) to keep the most important part of the picture visible) wide screen movies to fit a standard 4:3 television screen.
- 16:9 Wide – This method allows you to view the full 16:9 picture on a widescreen television.

## NTSC Disc Output

### 1 Open "MENU"

With the DVD in stop mode, press the MENU button.

### 2 Select "DVD"


Use the ▲ or ▼ buttons to highlight "DVD " then press the OK or ► buttons.

### 3 Select "Display Setup"

Highlight "Display Setup," then press the OK or ► buttons.

### 4 Set "NTSC Disc Output"

Highlight "NTSC Disc Output" then press the OK or ► buttons to select one of the following options:  
Depending on a disc, you can play a NTSC DVD disc by PAL 60Hz mode.

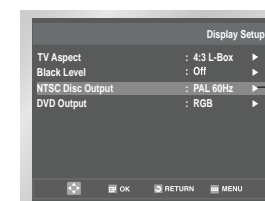

NTSC  
PAL 60Hz

## DVD Out

### 1 Open "MENU"

With the DVD in stop mode, press the MENU button.

### 2 Select "DVD"

Use the ▲ or ▼ buttons to highlight "DVD " then press the OK or ► buttons.


### 3 Select "Display Setup"

Highlight "Display Setup", then press the OK or ► buttons.

### 4 Set "DVD Out"


Highlight "DVD Out", then press the ► or OK buttons to select one of the following options:

- RGB – Sends RGB signal to the AV JACK (SCART terminal).
- Video – Sends COMPOSITE VIDEO signal to the AV JACK (SCART terminal).
- S-Video – Sends S-VIDEO signal to the S-JACK.

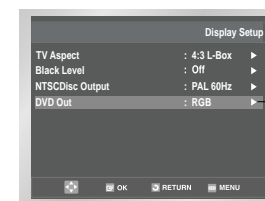

RGB  
Video  
S-Video

## DVD Black Level

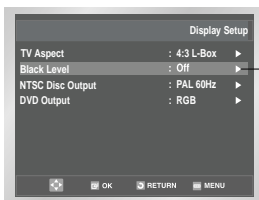

Off  
On

### 1 Open "MENU"

With the DVD in stop mode, press the MENU button.

### 2 Select "DVD"

Use the ▲ or ▼ buttons to highlight "DVD " then press the OK or ► buttons.




### 3 Select "Display Setup"

Highlight "Display Setup", then press the OK or ► buttons.

### 4 Set "Black Level"

Highlight "Black Level," then press the OK or ► buttons to select one of the following options:  
Adjusts the brightness of the screen.

- Off - This is the Standard NTSC reference Black Level for consistent brightness/contrast across all sources.
- On - This will enhance the Black Level for increased brightness/contrast when viewing DVDs.

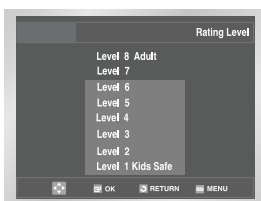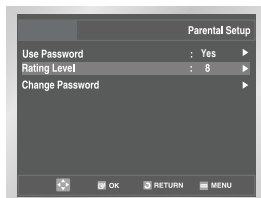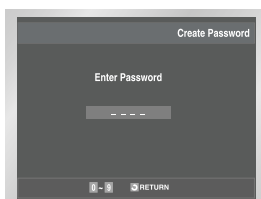

*Rating Control is a password protected system that allows you to block playback of DVDs based on their content. The system uses an eight level rating system.*

- If you try to play a DVD that exceeds the selected rating, an error message will appear.
- Not all discs are rated.

#### 1 Open "MENU"

With the DVD in stop mode, press the MENU button.

#### 2 Select "DVD"

Use the ▲ or ▼ buttons to highlight "DVD" then press the OK or ► buttons.

#### 3 Select "Parental Setup"

Highlight "Parental Setup", then press the OK or ► buttons.

#### 4 Select "Use Password"

Highlight "Use Password," then press OK or ► button to select one of the following options:

- No - Indicates that no password is required to view any DVD disc or to change Rating Control options. No additional Rating Control settings are necessary.
- Yes - Indicates that a password is required to view some DVD discs and to view Rating Control options. The menu will change as shown.

#### NOTES:

- The first time "Use Password" is set to "Yes," you will be prompted to enter a new password.
- If the "Enter Password" screen appears, then "Use Password" Password" has already been set to "Yes." Please skip to Step 5.

#### 5 Enter Password

Enter a 4-digit password using the 0-9 buttons on the remote control.

- Write your password down, and keep it in a safe place in case you need it to change your settings later.

#### 6 Select "Rating Level"

Move the selection bar to "Rating Level," then press OK or ► to select.

#### 7 Change Rating Level

Use the ▲ or ▼ buttons to select one of the following ratings:

- Level 8 Adult
- Level 7
- Level 6
- Level 5
- Level 4
- Level 3
- Level 2
- Level 1 Kids Safe
- Level 4
- Level 3
- Level 2
- Level 1 Kids Safe

All ratings above the level you select will also be blocked, e.g., if you block Level 6, then Levels 7 and 8 will also be blocked.

Press OK or ► button to confirm your selection.

- If you forgot your password, press power on from a RESET with no disc in the unit. Press the ◀ and ▶ buttons simultaneously on the front panel for 5 seconds. The "Reset ok" message will appear. Press the STANDBY/ON button.

*To take full advantage of the movie theater experience that DVD offers, you may want to connect your DVD-VCR to a complete Surround Sound system, including an A/V Receiver and six Surround Sound speakers.*


*Before You Begin...*

- If your A/V receiver is equipped with a Dolby Digital Decoder, you have the option to bypass the DVD-VCR's built-in Dolby Digital Decoder. Use the DIGITAL AUDIO OUT connection below.


#### 1 Digital Audio Out

Connect EITHER an optical cable OR a digital coaxial cable from the DIGITAL AUDIO OUT jacks on the back panel of the DVD-VCR to their corresponding Digital Audio Input jacks on your A/V Receiver:

- Optical ★ (SV-DVD50/SV-DVD55)
- Coaxial
- Use whichever connection is available on your A/V Receiver.

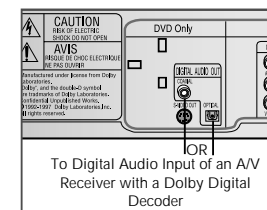

OR  
To Digital Audio Input of an A/V Receiver with a Dolby Digital Decoder

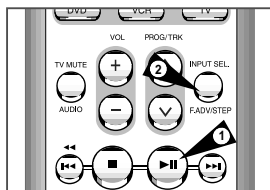

During DVD/CD playback you can select from the following special playback options. To resume normal playback, press the ►II (Play/Still) button.

### 1 Still

Press the ►II (Play/Still) button on the remote control during playback.

- The picture will still and the audio will mute.
- To resume playback, press the ►II (Play/Still) button.
- If the player is left in Still mode for 5 minutes, it will stop automatically.

### 2 Frame Advance (Step)

While in playback mode, press the F.ADV/STEP button on the remote control to advance one frame at a time.

- Audio is muted during Frame Advance mode.
  - Press ►II (Play/Still) to resume normal playback.
- NOTE: Frame Advance operates only in the forward direction.

### 3 Skip Forward/Back

While a CD or DVD disc is in Play mode, press the Skip Forward/Back (►►/◄◄) buttons on the remote control or front panel to jump forward and backward through disc chapters/tracks.

- Skip Forward will jump to the next chapter/track.
- Skip Back will jump to the beginning of the current chapter/track.
- Press Skip Back again to jump to the beginning of the previous chapter/track.

### Search Forward/Back

While a disc is in Play mode, press and hold the Forward/Back (►►/◄◄) buttons on the remote control or front panel to visually search forward/backward at 2X - 4X - 8X - 16X - 32X - 128X speed. Press ►II (Play/Still) button to resume normal speed.

### 4 Slow Motion

During playback, press the ►II (Play/Still) button to Still the image. Then use the Search Forward (►►) to play in slow motion at variable speeds.

- Each press increases the slow motion speed playback to 1/8, 1/4 or 1/2 normal speed.
- Audio is muted during slow motion playback.

### 5 Stop/Resume

- Press the Stop button once to stop playback. To resume the DVD/CD from the point where the disc stopped, press the ►II (Play/Still) button.
- Press the ■ (Stop) button twice to completely stop playback. The next time you press ►II (Play/Still), the disc will start over from the beginning.

Many DVDs feature their own menu systems, where you can select Titles, Chapters, Audio Tracks, Subtitles, and special disc features, such as movie trailers, and information on the cast. Use these buttons to make selections in the Disc menus.

### 1 DISC MENU Button



Press to access the DVD's Disc menu, if applicable.

### 2 Press ▲, ▼ or ◀, ▶ to navigate through DVD's Disc menu options.

- Press ▲, ▼ or ◀, ▶ to highlight menu choices.

### 3 OK Button

Press to make your selections in the Disc menu.

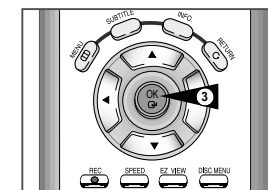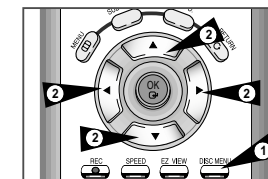

### 1 Press the EZ VIEW button.

- The screen size changes when the button is pressed repeatedly.
- The screen zoom mode operates differently depending on the screen setting in the initial setup menu.
- To ensure correct operation of the EZ VIEW button, you should set the correct aspect ratio in the initial setup .

### 2 If you are using a 16:9 TV

#### - For 16:9 aspect ratio discs

#### • Wide Screen


Displays the content of the DVD title in 16:9 aspect ratio.

#### • Screen Fit

The top and bottom of the screen are cut off. When playing a 2.35:1 aspect ratio disc, the black bars at the top and bottom of the screen will disappear. The picture will look vertically stretched. (Depending on the type of disc, the black bars may not disappear completely.)

#### • Zoom Fit

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarged.

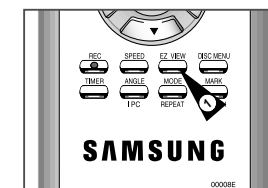

### - For 4:3 aspect ratio discs

- **Normal Wide**

Displays the content of the DVD title in 16:9 aspect ratio. The picture will look horizontally stretched.

- **Screen Fit**

The top and bottom of the screen are cut off and the full screen appears. The picture will look vertically stretched.

- **Zoom Fit**

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarged.

- **Vertical Fit**

When a 4:3 DVD is viewed on a 16:9 TV, black bars will appear at the left and right of the screen in order to prevent the picture from looking horizontally stretched.

### 3 If you are using a 4:3 TV

#### - For 16:9 aspect ratio discs

- **4:3 Letter Box**

Displays the content of the DVD title in 16:9 aspect ratio. The black bars will appear at the top and bottom of the screen.

- **4:3 Pan Scan**

The left and right of the screen are cut off and displays the central portion of the 16:9 screen.

- **Screen Fit**

The top and bottom of the screen are cut off and the full screen appears. The picture will look vertically stretched.

- **Zoom Fit**

When a 4:3 DVD is viewed on a 16:9 TV, black bars will appear at the left and right of the screen in order to prevent the picture from looking horizontally stretched.

#### - For 4:3 aspect ratio discs

- **Normal Screen**

Displays the content of the DVD title in 4:3 aspect ratio.

- **Screen Fit**

The top and bottom of the screen are cut off and the full screen appears. The picture would look vertically stretched.

- **Zoom Fit**

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarged.

➤ This function may behave differently depending on the type of disc.

To view the current Title, Chapter/Track, and counter position, press the **INFO.** button during DVD playback. The **Display** screen can also be used to quickly choose a title, chapter/track, or playing time.

#### 1 View the Display

During DVD/CD playback, press the **INFO.** button on the remote control.

#### 2 Select title

Use the **▲**, **▼** or **◀**, **▶** buttons to select Title, then press the **OK** button to change among all available titles on the disc.

#### 3 Select Chapter or Track

Use the **▲**, **▼** or **◀**, **▶** buttons to select Chapter or Track, then press the **OK** button to change among all available Chapters/Tracks on the disc.

#### 4 Select Counter Position

Use the **▲**, **▼** or **◀**, **▶** buttons to select the counter position indicator, then use the numeric buttons (0-9) to ok the desired counter position in the format HH:MM:SS (H = Hours, M = Minutes, S = Seconds). Then press the **OK** button to ok the desired counter position.

#### 5 Select 3D Sound

The 3D Sound function is a sound enhancement mode that lets you enjoy virtual surround sound with only two speakers.

➤ To make the screen disappear, press the **INFO.** button again.

**TITLE** To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a DVD, each movie will be identified.





**CHAPTER** Most DVD discs are recorded in chapters so that you can quickly find a specific passage.


**TIME** Allows playback of the film from a desired time. You must ok the starting time as a reference.

**AUDIO** Refers to the language of the film soundtrack. In the example, the soundtrack is played in English 5.1CH. A DVD disc can have up to 8 different soundtracks.

**SUBTITLE** Refers to the subtitle languages available in the disc. You will be able to choose the subtitles language or, if you prefer, turn them off from the screen. A DVD disc can have up to 32 different subtitles.

**3D SOUND** A surround sound effect is generated using only two front speakers.

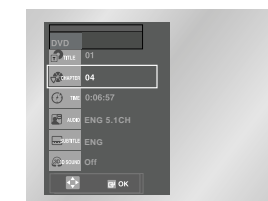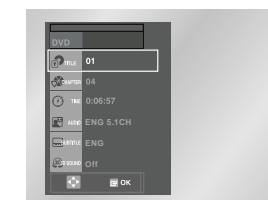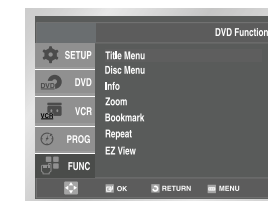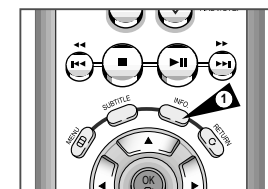

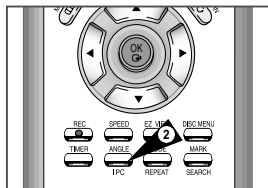

*Some DVD Movies provide you with various camera angle views on the same scene while they are showing. To activate the feature press the **ANGLE** Button.*

### 1 Check the Angle Icon

You'll see the Angle Icon while watching a DVD with multi Angles available.

### 2 View Angle Menu Options

When the Angle Icon comes up to the screen press the Angle button to see the Angle menu.

### 3 Select an Angle option

Press the up/down buttons to select a camera angle you may wish to see.

*Some DVDs provide subtitles in one or more languages. You can use the **SUBTITLE** button to quickly view and change settings.*

### 1 Open Subtitle Menu

During playback, press the SUBTITLE button.

### 2 Set Subtitle Language


Use the ◀, ▶ buttons to select from the available subtitle languages.


- Subtitle languages are represented by abbreviations.

### 3 Activate Subtitles

Use the ▲, ▼ buttons to turn On or Off subtitles.

- The default is "Off".

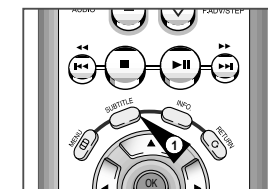


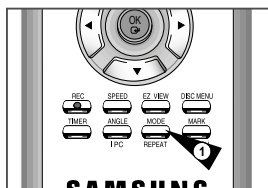

DVD



CD

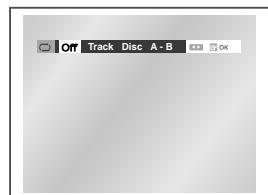

*A to B Repeat feature enables you to repeat the designated section on a DVD or CD. To activate, mark where to start(A) and where to end(B) of the section you want to watch.*

### 1 Select A-B Repeat Function

Press the REPEAT button while in Play mode, then use the ◀, ▶ buttons to select A-B Repeat.

- When you select A-B Repeat, "A-" will be highlighted.

NOTE: The menu will display "Track" in place of "Chapter" if you are playing a CD.

### 2 Mark the Starting Point

Press the OK button at the beginning of the segment you want to repeat (Point A).

- Once you select Point A, "B" will be highlighted.

NOTE: The minimum AB Repeat time is 5 seconds.

### 3 Mark the Ending Point

Press the OK button again at the end of the segment you want to repeat (Point B).

- The segment will begin repeating in a continuous loop.

### 4 Cancel A-B Repeat

Press the REPEAT button to open the Repeat Menu, use the ◀, ▶ buttons to highlight "Off," then press the OK button.

- It is available to press CLEAR button on the remote controller in order to stop REPEAT play.

*You can repeat a single chapter or a complete title.*

### 1 Open Repeat Menu

Press the REPEAT button while in Play mode to open the Repeat menu.

- The current Repeat mode will be highlighted.

### 2 Select "Chapter"

Use the ◀, ▶ buttons to select "Chapter".

- When you select Chapter Repeat, "Chapter" will be highlighted.

### 3 Repeat Chapter

Press the OK button to repeat the current chapter or track.


### 4 Select "Title"

Use the ◀, ▶ buttons to select "Title".


- When you select Title Repeat, "Title" will be highlighted.

### 5 Repeat Title

Press the OK button to repeat the title.

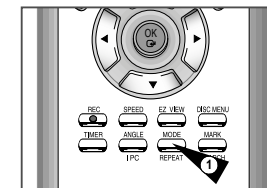

DVD

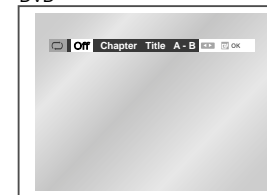

CD



*Multiple language/audio setup options, such as Dolby Digital 5.1, Dolby Pro Logic, or LPCM 2 Channel audio, are available on some DVDs. You can use the AUDIO button to quickly view and select the options available on a disc.*

### 1 Open the Audio Menu

During playback, press the AUDIO button on the remote control.

### 2 Select DVD Audio Track

Use the ◀, ▶ buttons to select the desired language/audio setup on the DVD.

- Languages are represented by abbreviations, e.g. "ENG" for "English."


DVD



CD





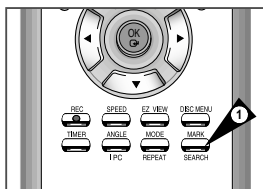

Up to three Bookmarks can be inserted for a given DVD, allowing you to quickly jump to your favorite scene or song.

#### 1 Open Mark Menu

During playback, press the MARK button on the remote control. The "MARK" header will be displayed on the screen.

#### 2 Select Mark Placeholder

Use the ◀, ▶ buttons to move to one of the three mark placeholders (- - -).

- The placeholder you select

#### 3 Set the Mark

Keep on playing the DVD up to the scene you want to mark, then press the OK button. The placeholder (-) will change to a number (1, 2 or 3).

- You may continue to set up to three marks.
- Press the MARK button when complete.
- Depending on the disc, the mark function may not work.

#### 4 Play Mark

- During playback, press the MARK button on the remote control.
- Use the ◀, ▶ buttons to move to a previously set bookmark.
- Press the Play/Still button to play the mark.
- Press the CLEAR button to cancel the mark.
- Press the MARK button again to exit the mark menu.

When an MP3/WMA Disc is inserted into the DVD player, the first song file of the first folder plays.

- If more than two file extensions are present, select the media of your choice.
- To change the currently playing media, press the STOP (■) button twice and then press the DISC MENU button.
- If no button on the remote controller is pressed for 60 seconds, the menu will disappear and the selected item will be played.

#### MP3/WMA Play Function



1. When the first song file is playing, the music file menu will appear on the right side of the screen. Up to 8 music folders can be displayed at a time. If you have more than 8 folders on a disc, press the ◀, ▶ buttons to bring them up on the screen.
2. Use the ▲, ▼, ◀, ▶ buttons to select the desired music folder, then press OK. Use the ▲, ▼, ◀, ▶ buttons again to select a song file. Press OK to begin playback of the song file.

#### Program/Random playback

1. Press the MODE button in STOP mode to switch between the RANDOM and PROGRAM modes.



- Press the REPEAT button in STOP mode to hear only music continuously and press it once again to release.
- PROGRAM/RANDOM playback cannot be used if the disc contains more than two types of file extensions.

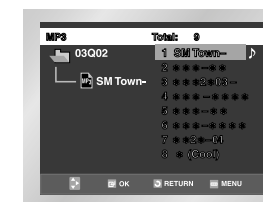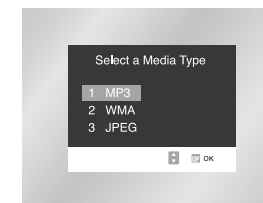

## MP3/WMA Play

### CD-R MP3/WMA discs


When playing CD-R/MP3 or WMA discs, please follow all the recommendations for CD-R above, plus the comments below:

- **Your MP3 or WMA files should be ISO 9660 or JOLIET format.**  
ISO 9660 format and Joliet MP3 or WMA files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. These two formats are the most widely used.
- **When naming your MP3 or WMA files do not exceed 8 characters, and place ".mp3, .wma" as the file extension.**  
General name format of: Title.mp3, or Title.wma. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (,.,/,\\,=,+).
- **Use a decompression transfer rate of at least 128 Kbps when recording MP3 files.**  
Sound quality with MP3 files basically depends on the rate of compression/decompression you choose. Getting audio CD quality sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like 192 Kbps or more, only rarely give better sound quality.  
Conversely, files with decompression rates below 128 Kbps will not be played properly.
- **Use a decompression transfer rate of at least 64Kbps when recording WMA files.**  
Sound quality with WMA files basically depends on the rate of compression/decompression you choose. Getting audio CD quality sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 64Kbps and up to 192Kbps.  
Conversely, files with decompression rates below 64Kbps or over 192Kbps will not be played properly.
- **Do not try recording copyright protected MP3 files.**  
Certain "securized" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media™ (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.
- **Important:** The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality.  
You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).
- This unit can play a maximum of 500 files and 300 folders per disc.

## Program Play & Random Play

### Program Play (CD/MP3/WMA)

1. Press the MODE button.
2. Use the ◀, ▶ buttons to select PROGRAM. Press the OK button.
3. Use the ◀, ▶ or ▲, ▼ buttons to select the first track to add to the program.  
Press the OK button. The selection numbers appear in the Program Order box.
4. Press the PLAY/STILL (▶||) button.  
The disc will be played in programmed order.

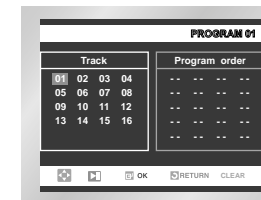


### Random Play (CD/MP3/WMA)

1. Press the MODE button.
2. Use the ◀, ▶ buttons to select RANDOM. Press the OK button.  
The disc will be played in random order.



- Depending on the disc, the Program and Random Play functions may not work.
- To resume normal play, press the CLEAR button.
- PROGRAM/RANDOM playback cannot be used if the disc contains more than two types of file extensions.
- This unit can support a maximum of 99 programmed order.

## Picture CD Playback

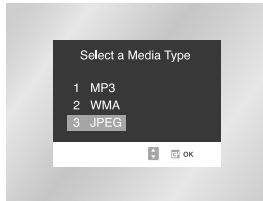

- Select JPEG in the menu to view a Photo CD.
- To change the currently playing media, press the STOP (■) button twice and then press the DISC MENU button.
- If no button on the remote controller is pressed for 60 seconds, the menu will disappear and the selected item will be played.


1. Open the disc tray.
2. Load the disc on the tray.  
- Load the disc with the labeled side up.
3. Close the tray.  
- The tray closes and you should get a screen that looks like the one below.




- Use the ▲, ▼ or ◀, ▶ buttons on the remote controller to select the picture you want to view and then press the OK button. (Press the PLAY/STILL (▶||) button if you want to play it in the Slide Show mode.)

- To see the next 6 pictures, press the ►►I button.

- To see the previous 6 pictures, press the I◀◀ button.

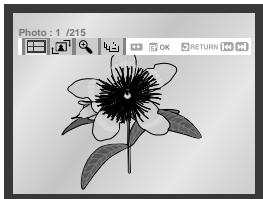

- [Grid Icon] : Return to the Album Screen.
- [Rotate Icon] : Each time the OK button is pressed, the picture rotates 90 degrees clockwise.
- [Zoom Icon] : Each time the OK button is pressed, the picture is enlarged up to 2X. (Normal → 2X → Normal)
- [Slide Show Icon] : The unit enters slide show mode.  
\*Press the RETURN button to return to the album screen.  
\*Before the Slide Show can begin, the picture interval must be set.

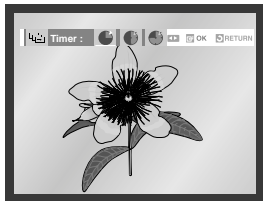

- [6s Icon] : When this icon is selected and OK is pressed, the pictures change automatically with about an 6 second interval.
- [12s Icon] : The pictures change automatically with about an 12 second interval.
- [18s Icon] : The pictures change automatically with about an 18 second interval.  
\*Depending on the file size, each interval between images may take longer or shorter than the manual suggests.

## Picture CD Playback

### CD-R JPEG Discs

- Only files with the ".jpg" and ".JPG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 500 images can be stored on a single CD.
- Only Kodak Picture CDs can be played.
- When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
- Picture discs other than Kodak Picture CD may take longer to start playing or may not play at all.
- If a number of files in 1 Disc is over 500, only 500 JPEG file can be played.
- If a number of folders in 1 Disc is over 300, only JPEG files in 300 folders can be played.



- When the banner is being appeared, press the RETURN button to return to the album screen.
- If no buttons on the remote controller pressed for 10 seconds, the menu will disappear.  
Press the ▲, ▼ or ◀, ▶ buttons on the remote controller to display the menu again.

## Technical Specifications

<b>General</b>	Rated voltage	220 - 240V, 50Hz
	Power consumption	23 Watts
	Weight	4.5 Kg
	Size	430mm X 330mm X 100mm
	Operating ambient temperature	+5°C ~ +35°C
	Installation conditions	Operation position : Horizontal, Relative humidity : Below 75%
<b>Input</b>	Video input (Rear)	Euro Scart socket : 1.0Vp-p (unbalanced) 75Ω
	Audio input (Rear)	Euro Scart socket : -8dBm, 47Kohm unbalanced
	Video input (Front)	
	Audio input (Front)	
<b>Output</b>	RF out	UHF 21-69 (Initial CH60)
	Audio (DVD, VCR)	RCA jack, Euro Scart socket
	Audio (DVD only)	Digital audio out (OPTICAL, COAXIAL)
	Video (DVD, VCR)	RCA jack, Euro Scart socket
	Video (DVD only)	S-Video out RGB out : Euro Scart socket
<b>VCR</b>	Tape format	VHS type video tape, S-VHS type video tape (Playback only)
	Colour system	PAL, NTSC4.43, NTSC playback on PAL TV
	Tuning system	I
	Video S/N	Above 43dB (standard recording)
	Resolution	Above 240 lines (standard recording)
	Audio S/N	Above 68dB (Hi-Fi), 39dB (Mono)
	Audio frequency characteristics	20Hz - 20KHz (Hi-Fi)
<b>DVD</b>	Disc	DVD, CD (12cm), CD (8cm),
	Audio S/N	95dB
	Audio dynamic range	105dB

## Problems and Solutions (VCR)

Before contacting the Samsung after-sales service, perform the following simple checks.

Problem	Explanation/Solution
No power	<ul style="list-style-type: none"> <li>Check that the power plug is connected to a wall outlet.</li> <li>Have you pressed the STANDBY/ON button?</li> </ul>
You cannot insert a video cassette	<ul style="list-style-type: none"> <li>A video cassette can only be inserted with the window side up and the safety tab facing you.</li> </ul>
The television programme was not recorded	<ul style="list-style-type: none"> <li>Check the DVD-VCR aerial connections.</li> <li>Is the DVD-VCR tuner properly set?</li> <li>Check if the safety tab is intact on the cassette.</li> </ul>
Timer recording was unsuccessful	<ul style="list-style-type: none"> <li>Was the STANDBY/ON button pressed to activate the timer?</li> <li>Re-check the recording start/stop time settings.</li> <li>If there was a power failure or interruption during timer recording, the recording will have been cancelled.</li> </ul>
No playback picture or the picture is distorted	<ul style="list-style-type: none"> <li>Check to see if you are using a prerecorded tape.</li> </ul>
You cannot see normal broadcasts	<ul style="list-style-type: none"> <li>Check the TUNER/EXTERNAL setting. It should be on TUNER.</li> <li>Check the TV/VCR aerial connections.</li> </ul>
Noise bars or streaks on playback	<ul style="list-style-type: none"> <li>Press the TRK (↖ or ↗) buttons to minimize this effect.</li> </ul>
When the ►   button is pressed during playback, the still picture has severe "noise bars" streaks	<ul style="list-style-type: none"> <li>A still picture may have "noise bars", depending on the condition of the tape. Press the TRK (↖ or ↗) buttons during SLOW motion to minimize this effect.</li> </ul>
Video Head Cleaning	<ul style="list-style-type: none"> <li>If poor pictures appear on a variety of cassettes, the video heads may need cleaning. This is not a common problem and unless it appears, the heads should not be cleaned. When cleaning the video heads, read all instructions provided with the head cleaning cassette. Incorrect head cleaning can permanently damage the video heads.</li> </ul>
If when tuning in your TV to the DVD-VCR TV does not find the Screen or the pattern when found suffers from interference, it may be due to the DVD-VCR output channel clashing with the normal TV transmissions in your area. To prevent this you will need to change the DVD-VCR output channel in the following way	<ol style="list-style-type: none"> <li>Remove the aerial input plug from the socket marked (aerial symbol) on the rear of the DVD-VCR.</li> <li>Carry out the instructions "Tuning Your Television for the DVD-VCR" (see page 16).</li> <li>Carry out the instructions "Setting the DVD-VCR output Channel" (see page 25), move the channel number several channels down from the original setting. (example: from 60 to 57).</li> <li>Replace the aerial plug into the socket marked (aerial symbol) on the rear of the DVD-VCR.</li> <li>Re-tune your TV to the DVD-VCR again by following instructions "Tuning Your Television for the DVD-VCR" (page 16).</li> <li>If the problem still exists repeat steps 1 to 5 moving several more channels away from the original setting.</li> </ol>

 


If you are unable to solve the problem after reading the above instructions, note:

- ◆ The model and serial number on the rear of your DVD-VCR
- ◆ The warranty information
- ◆ A clear description of the problem

Then contact your nearest SAMSUNG after-sales service.

## Troubleshooting Guide (DVD)

### Before requesting service (troubleshooting)

Problem	Action	Page
Disc does not play.	<ul style="list-style-type: none"> <li>◆ Ensure that the disc is installed with the label side facing up.</li> <li>◆ Check the region number of the DVD.</li> <li>◆ This player cannot play CD-ROMs, DVD-ROMs, etc. Insert a DVD, or a CD.</li> </ul>	P6
5.1 channel sound is not being reproduced.	<ul style="list-style-type: none"> <li>◆ 5.1 channel sound is reproduced only when the following conditions are met. :               <ol style="list-style-type: none"> <li>1) The DVD-VCR player is connected with the proper amplifier</li> <li>2) The disc is recorded with 5.1 channel sound.</li> </ol> </li> <li>◆ Check whether the disc being played has the "5.1 ch" mark on the outside.</li> <li>◆ Check if your audio system is connected and working properly.</li> </ul>	P47 P49 P50
The  icon appears on screen.	<ul style="list-style-type: none"> <li>◆ The features or action cannot be completed at this time because:               <ol style="list-style-type: none"> <li>1. The DVD's software restricts it.</li> <li>2. The DVD's software doesn't support the feature (e.g., angles).</li> <li>3. The feature is not available at the moment.</li> <li>4. You've requested a title or chapter number or search time that is out of range.</li> </ol> </li> </ul>	P48~69
Playback mode differs from the Setup Menu selection.	<ul style="list-style-type: none"> <li>◆ Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.</li> </ul>	P48-54
The screen ratio cannot be changed.	<ul style="list-style-type: none"> <li>◆ The Screen Ratio is fixed on your DVDs.</li> </ul>	P52
No audio.	<ul style="list-style-type: none"> <li>◆ Make sure you have selected the correct Digital Output in the Audio Options Menu.</li> </ul>	P49-51
Forgot password	<ul style="list-style-type: none"> <li>◆ Press power on from a cold start with no disc in the unit. Press the  and  buttons simultaneously on the front panel for five seconds. The Select Menu Language display will appear. Select the desired language button. Press the MENU button on the remote control to select the Parental Mode. The Parental Mode is now unlocked as indicated on the display. Press the DOWN button to select Parental. Press OK and the Create Password display will appear. You can now set your rating level and change your password to a new number.</li> </ul>	P54
If you experience other problems.	<ul style="list-style-type: none"> <li>◆ Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again.</li> <li>◆ If the problem still cannot be solved, please contact your nearest authorized service center.</li> </ul>	



## WARRANTY CARD

GUARANTEE

GARANZIA

GARANTI

GARANTÍA

GARANTIE

GARANTIA

ΕΓΓΥΗΣΗ

TAKUU

**MODEL NAME**  
Modellnaam, Nombre de modelo, Nome de modelo, Modellbezeichnung, Modelnaam,  
Nom du modèle, Il nome di modello, Montado proleto, Asiakaan puh.no, Modelnaam, Modell

**SERIAL NO.**  
Seriennummer, No. de serie, Número serial, Seriennummer, Serie nummer, Numéro de série,  
Il numero di matricola, Arigov kataskuht, Malli, Seriennummer, Serial

**DATE OF PURCHASE**  
Kõbeid, Kobesadato, Fecha de compra, Data de compra, Kaufdatum, Datum van aankoop, Date d'achat,  
La data d'acquisto, Ihtorinhuu agraav agraavthv/Asiakaan osote, Salgsdato, Inkopsdatum

**CUSTOMER'S NAME**  
Kundenaam, Kundenam, Nombre de cliente, Nombre del cliente, Nome do cliente, Name des Kunden,  
Naam van klant, Nom du client, Il nome del cliente, Omasiitnato, Asiakaan nimi, Kundenam, Kundens namn

**CUSTOMER'S TEL. NO.**  
Kundens telefonnummer, No. de Tel. de client, No. de Tel. del cliente, Número de teléfono de cliente,  
Telefonnummer des Kunden, Telefon nummer van klant, Número de teléfono du client, Il numero de telefono del client, ,  
Ar ligov, thle fvaou tou agraavthv/Myyjän puh.no, Kundens telefonnr, Kundens telefonnr.

**CUSTOMER'S ADDRESS**  
Kundeadress, Kundeadresse, Dirección de cliente, Dirección del cliente, Endereco de cliente, Adresse des Kunden,  
Adres van klant, adresse du client, L'indirizzo del cliente, Dieugirsh, Asiakaan aadress, Kundenadresse, Kundenadresse.

**DEALER'S NAME**  
Handelstaal, Forhandler, Nom du marchand, Il nome del commerciante, Omasiitnato, Asiakaan nimi, Forhandler,  
Handelstaal, Forhandler, Nom du marchand, Il nome del commerciante, Omasiitnato, Asiakaan nimi, Forhandler, Aftonellare

**DEALER'S TEL. NO.**  
Handelstaal, Forhandler, Nom du marchand, Il nome del commerciante, Omasiitnato, Asiakaan nimi, Forhandler, Aftonellare

**DEALER'S ADDRESS**  
Handelstaal, Forhandler, Nom du marchand, Il nome del commerciante, Omasiitnato, Asiakaan nimi, Forhandler, Aftonellare

DEALER'S STAMP & SIGNATURE

CUSTOMER'S SIGNATURE

Please ensure the form above is completed at the time of purchase and present it to the dealer to quality for guarantee service, otherwise your guarantee may be affected.

CAUTION



UNITED KINGDOM

This Samsung product is warranted for the period of twelve (12) months from the original date of purchase, against defective materials and workmanship. In the event that warranty service is required, you should return the product to the retailer from whom it was purchased.

However, Samsung Authorised Dealers and Authorised Service Centres in other EC Countries will comply with the warranty on the terms issued to purchasers in the country concerned. In case of difficulty, details of our Authorised Service Centres are available from:

**Samsung Electronics (U.K.) Ltd.,  
Euro Service Centre, Stafford Park 12,  
TELFORD, Shropshire TF3 3BJ,  
Tel: 0870 242 0303, Fax: 01952 207 117**

■ WARRANTY CONDITIONS

1. The warranty is only valid if, when warranty service is required, the warranty card is fully and properly completed and is presented with the original invoice or sales slip or confirmation, and the serial number on the product has not been defaced.
2. Samsung's obligations are limited to the repair or, at its discretion, replacement of the product or the defective part.
3. Warranty repairs must be carried out by Authorised Samsung Dealers or Authorised Service Centres. No re-imbursement will be made for repairs carried out by non Samsung Dealers and, any such repair work and damage to the products caused by such repair work will not be covered by this warranty.



REPUBLIC OF  
IRELAND

4. This product is not considered to be defective in materials nor workmanship by reason that it requires adaptation in order to conform to national or local technical or safety standards in force in any Country other than the one for which the product was originally designed and manufactured. This warranty will not cover, and no re-imbursement will be made for such adaptation nor any damage which may result.

5. This warranty covers none of the following:

- a) Periodic check ups, maintenance and repair or replacement of parts due to normal wear and tear.
  - b) Cost relating to transport, removal or installation of the product.
  - c) Misuse, including the failure to use this product for its normal purposes or incorrect installation.
  - d) Damage caused by Lightning, Water, Fire, Acts of God, War, Public Disturbances, incorrect mains voltage, improper ventilation or any other cause beyond the control of Samsung.
6. This warranty is valid for any person who legally acquired possession of the product during the warranty period.
  7. The consumers statutory rights in any applicable national legislation whether against the retailer arising from the purchase contract or otherwise are not affected by this warranty. Unless there is national legislation to the contrary, the rights under this warranty are the consumers sole rights and Samsung, its subsidiaries and distributors shall not be liable for indirect or consequential loss or any damage to records, compact discs, videos or audio taper or any other related equipment or material.

**SAMSUNG ELECTRONICS (U.K.) LTD.**

[www.samsungvcr.com](http://www.samsungvcr.com)

THIS APPLIANCE IS DISTRIBUTED BY



ELECTRONICS

AK68-00169C